

You should consider replacing your KELLY Disc Chains when they are no longer performing the desired outcome they were originally purchased for. KELLY Disc Chains are considered to be wear items and it's reasonable to expect that these parts may need to be replaced over time.



We would recommend replacing K4, CL1 and W36 Disc Chains when they are worn to the bottom of the KELLY logo or 4.9 inches (125mm) from the centre of the discs. For CL2 Disc Chains we would recommend replacing when they are worn to 5.5 inches (140mm) from the centre of the discs. As indicated by the red line in the images.

How do I purchase new KELLY Disc Chain?

Visit kellytillage.com/contact/ or scan the below QR code to find your local KELLY Representative or Dealer.



KEFL017us - C - 23102023







