




# When should I consider replacing my KELLY Disc Chains?


You should consider replacing your KELLY Disc Chains when they are no longer performing the desired outcome they were originally purchased for. KELLY Disc Chains are considered to be wear items and it's reasonable to expect that these parts may need to be replaced over time.

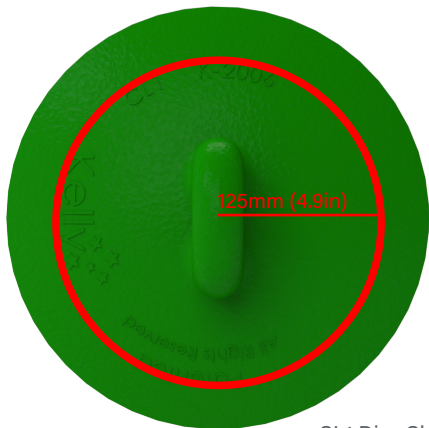

CL1 Disc Chain



K4 Disc Chain

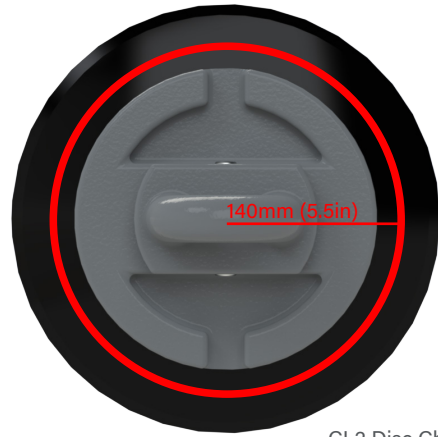

CL2 Disc Chain

We would recommend replacing K4, CL1, W36 & R300 Disc Chains when they are worn to the bottom of the KELLY logo or 125mm (4.9 inches) from the centre of the discs. For CL2 Disc Chains we would recommend replacing when they are worn to 140mm (5.5 inches) from the centre of the discs. As indicated by the red line in the image.

## How do I purchase new KELLY Disc Chain?

Visit [kellytillage.com/contact/](http://kellytillage.com/contact/) or scan the below QR code to find your local KELLY Representative or Dealer

