

KELLY

Better Tillage. Better Tomorrow.

Operating Instruction Manual

KTOM-E-01052024



SERIAL NUMBER:

KELLY

Phone +61 8 8667 2253
Email sales@kellytillage.com
kellytillage.com

Booleroo (Head Office)
684 Kelly Road,
Booleroo Centre SA 5482

Adelaide Office
28 Greenhill Road,
Wayville SA 5034





Thank you for choosing a KELLY product.

We trust that you find the following manual clear and easy to follow. If you should require additional customer support or assistance, please do not hesitate to contact us.

Spare parts can be purchased, as required, through your local dealer or by contacting KELLY directly.

The KELLY team values your feedback. Should you have any difficulties that you wish to raise, suggestions for improvement or modifications that you feel would enhance our products we look forward to hearing from you.

Contact Us

Australia

Booleroo (Head Office)

684 Kelly Road,
Booleroo Centre SA 5482

+61 8 8667 2253

Monday - Friday
8am - 4pm ACDT

Adelaide Office

28 Greenhill Road,
Wayville SA 5034

+61 8 8667 2253

Monday - Friday
8am - 4pm ACDT

Global Locations

Eastern Canada

Leading Edge Equipment
www.leadingedgeequipment.ca

1-519-421-3223

Monday - Friday
8am - 4pm EST

Western Canada

Adair Sales & Marketing Co Inc
www.adairreps.com

1-306-773-0996

Monday - Friday
8am - 5pm CST

United States

Hood & Company

+1 417-865-2100

Monday - Friday
8am - 4pm CST

Europe

kellytillage.com

+61 8 8667 2253

Monday - Friday
8am - 4pm ACDT

Argentina

Giorgi Sa Maquinarias Agrícolas
www.giorgi.com.ar

+54 3464 493512

Monday - Friday
8am - 5pm ART

South Africa

Desmond Whitfield CC

+27 82 567 8245

Monday - Friday
8am - 4pm SAST

Contents

Safety Information

| | |
|--------------------------------------|------|
| Signal words | 4 |
| Safety guidelines | 4 |
| General operation | 5 |
| Transport | 5 |
| Hydraulics | 5 |
| Maintenance and inspection | 5 |
| Safety decals - individual placement | 6-12 |

Section 1 - Warranty

| | |
|---------------------------|----|
| Warranty policy | 13 |
| Product registration form | 14 |

Section 2 - Machine Operation

| | |
|-------------------------|-------|
| Before operation | 15 |
| Pre-operation checklist | 15 |
| Basic operation | 16-20 |

Section 3 - Chain Operation and Correct Setup

| | |
|---|-------|
| Importance of chain tension | 21 |
| Set chain tension | 21-22 |
| Chain curve | 23 |
| Frame height adjustment | 24 |
| Drawbar height adjustment | 25 |
| Chain height adjustment | 26 |
| Wing extension | 27-30 |
| Fine adjustment for perfect operating results | 31 |
| Importance of tapered chain end (TCE) | 32-33 |

Section 4 - Maintenance and Inspection

| | |
|-----------------------------------|----|
| Maintenance and inspection | 34 |
| Recommended maintenance checklist | 35 |
| Chain inspection | 36 |
| Trouble shooting | 36 |

Section 5 - Specifications

| | |
|-----------------------------------|----|
| Operating speed | 37 |
| Tyre pressure | 37 |
| 1204 specifications | 37 |
| Bolt torque settings | 38 |
| Disc chain lengths and quantities | 39 |

Section 6 - Pre-delivery checklist

| | |
|------------------------|-------|
| Pre-delivery checklist | 40 |
| Notes | 41-42 |

Register within 2 months of purchasing your machine to receive an additional 12 months warranty. Find the registration information on page 14.

Safety Information



Read all operating instructions and study all photographs thoroughly before operating the unit.

Please note: Left and right is determined by standing behind the machine and looking to the front.

Signal Words

A signal word - DANGER, WARNING, or CAUTION, is used with the safety alert symbol.

When you see this symbol on your machine or in this manual, be alert to instructions involving your personal safety and the safety of others. Failure to follow these instructions can result in injury or death.



DANGER - Indicates an immediate hazardous situation that, if not avoided, will result in **DEATH OR SERIOUS INJURY**.



WARNING - Indicates a potentially hazardous situation that, if not avoided, could result in **DEATH OR SERIOUS INJURY**.



CAUTION - Indicates a potentially hazardous situation that, if not avoided, may result in a **MINOR OR MODERATE INJURY**.

Carefully read all safety points in this manual and on your machine. Keep all safety decals in good condition and replace ones that have been worn or lost. Replacement decals are available by contacting your local dealer.

If any safety decals are missing please contact your local dealer immediately and do not use the machine.

Safety Guidelines

- This equipment is dangerous to persons unfamiliar with its operation.
- Do not attempt to operate or assemble this unit without reading this manual and developing a thorough understanding of the safety precautions
- Do not attempt to operate this equipment under the influence of drugs or alcohol.
- Review the safety instructions with all users annually.

Safety Information



Read all operating instructions and study all photographs thoroughly before operating the unit.

Please note: Left and right is determined by standing behind the machine and looking to the front.

General Operation

- Proceed cautiously under overhead powerlines and around power poles, as contact may result in the operator suffering a severe electrical shock.
- Never allow anyone within the immediate area when operating machinery.
- Stand clear when raising or lowering wings.

Transporting

- Always travel at a safe speed. **NEVER EXCEED 25kph.**
- Ensure your speed is low enough for an emergency stop to be safe and secure and reduce speed prior to turns.
- Ensure safety chain is attached correctly to the towing vehicle.
- Please refer to your own country, state, provincial, county or municipality laws on the rules of transporting farm machinery on roads.
- Ensure that disc or prickler chains are engaged in chain guides and supports. Disc or prickler chain should be clear of the ground.
- Be aware of the height, length and width of the machine. Beware of obstacles and overhead powerlines.
- Use approved accessory and necessary warning devices on the road during both day and night time transporting.


Hydraulics

- **NEVER** remove hydraulic hoses or ends unless the machine is in either transport position or fully extended in working position. Relieve all hydraulic pressure before disconnecting hydraulic hoses and fittings.
- Ensure all fittings and hoses are in good condition.
- Do not search for high pressure hydraulic leaks without hand and face protection. A leak can penetrate the skin, thereby requiring immediate medical attention.
- Double check that all is clear before operating hydraulics.
- Maintain proper hydraulic fluid levels and pressure.

Maintenance and Inspection


- Good maintenance is your responsibility.
 - Regular maintenance and inspection is imperative
- Maintenance guidelines can be found in section 4.*

Safety Decals - Individual Placement

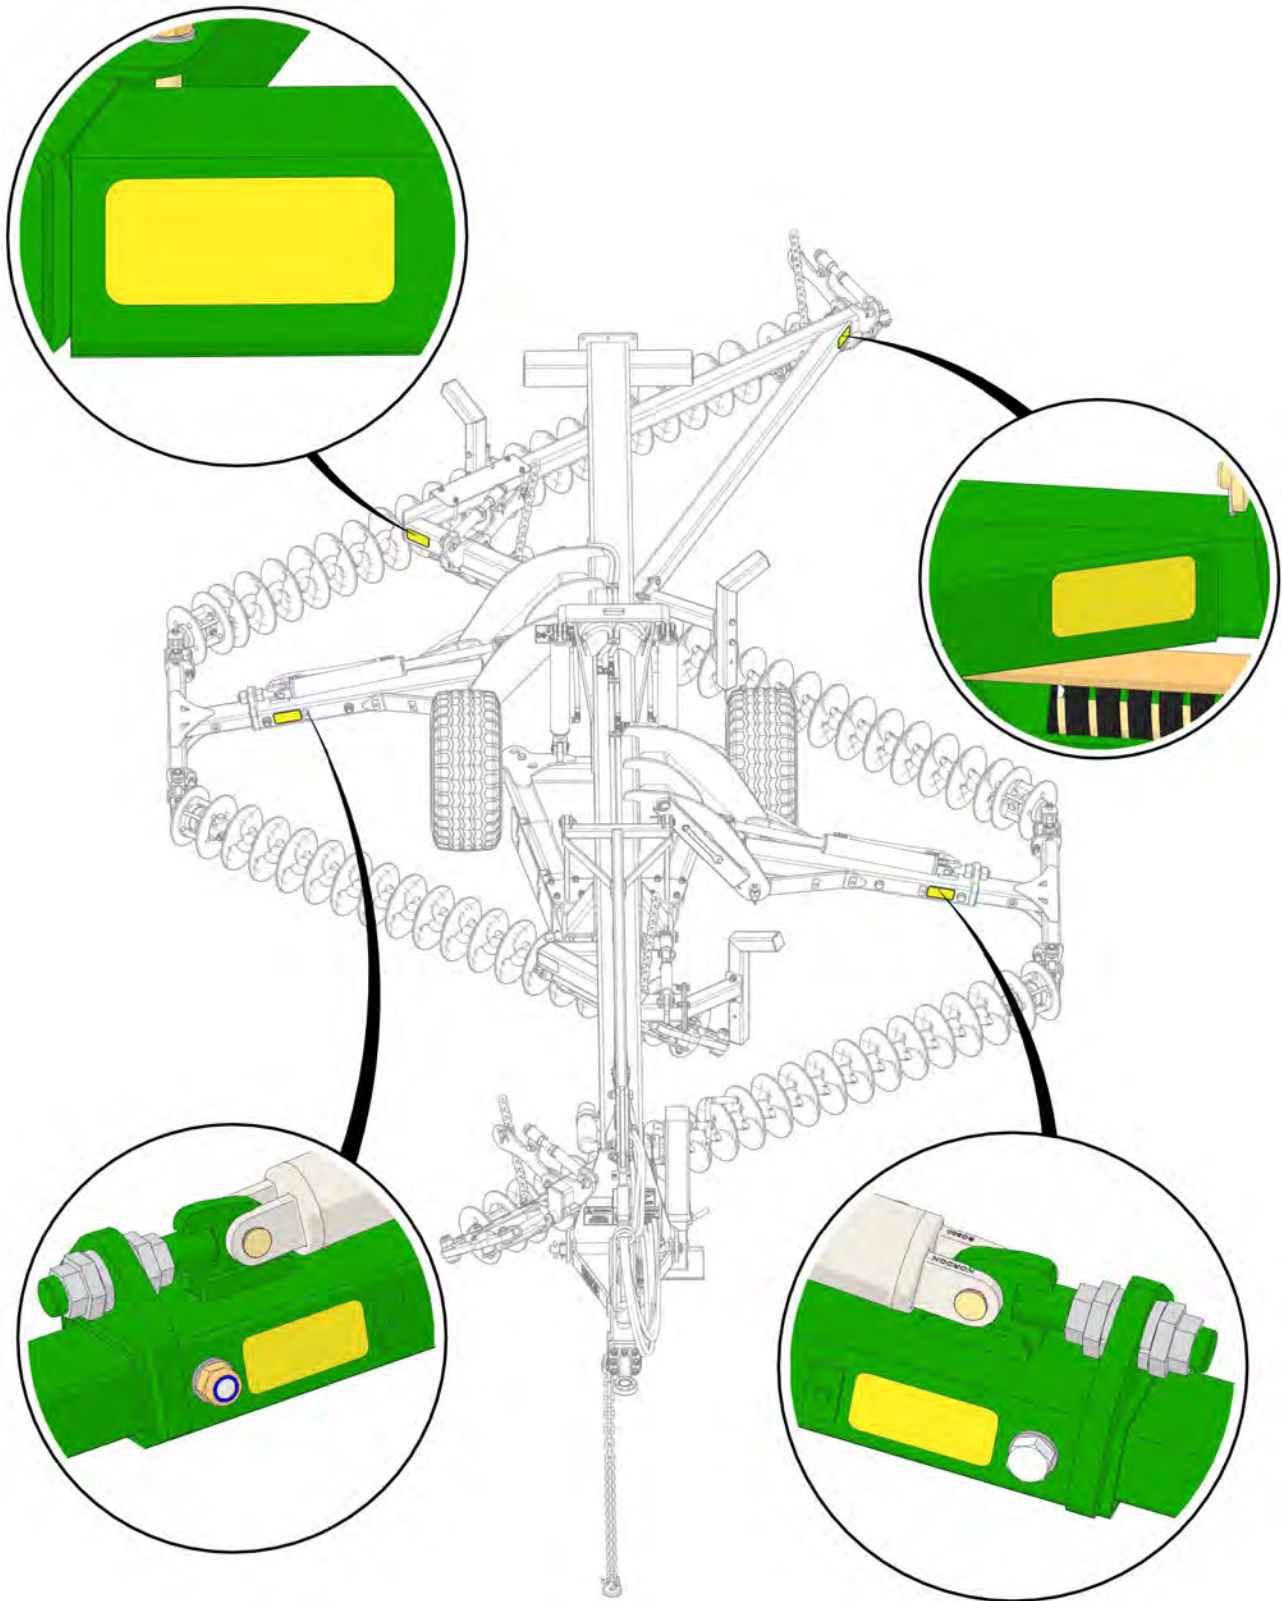


If any safety decals are missing please contact your local dealer immediately and do not use the machine.

Safety Decals - Individual Placement

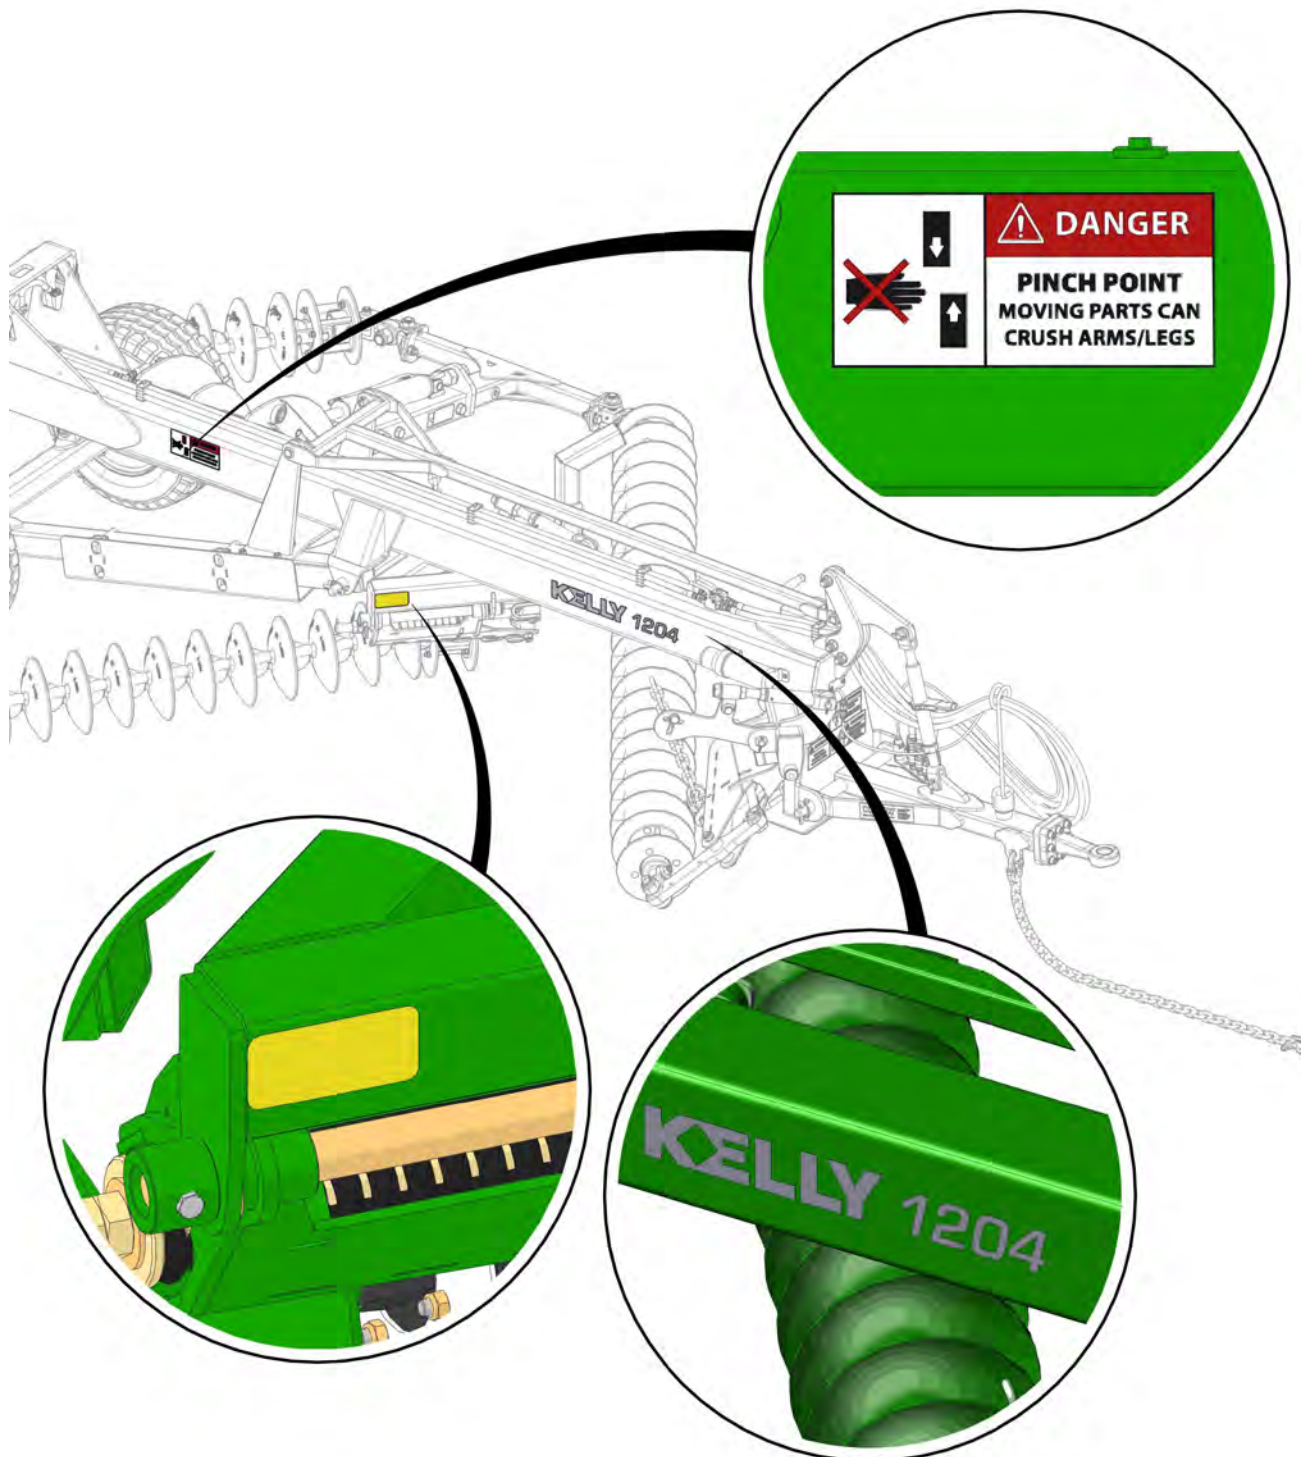


If any safety decals are missing please contact your local dealer immediately and do not use the machine.

Safety Decals - Individual Placement

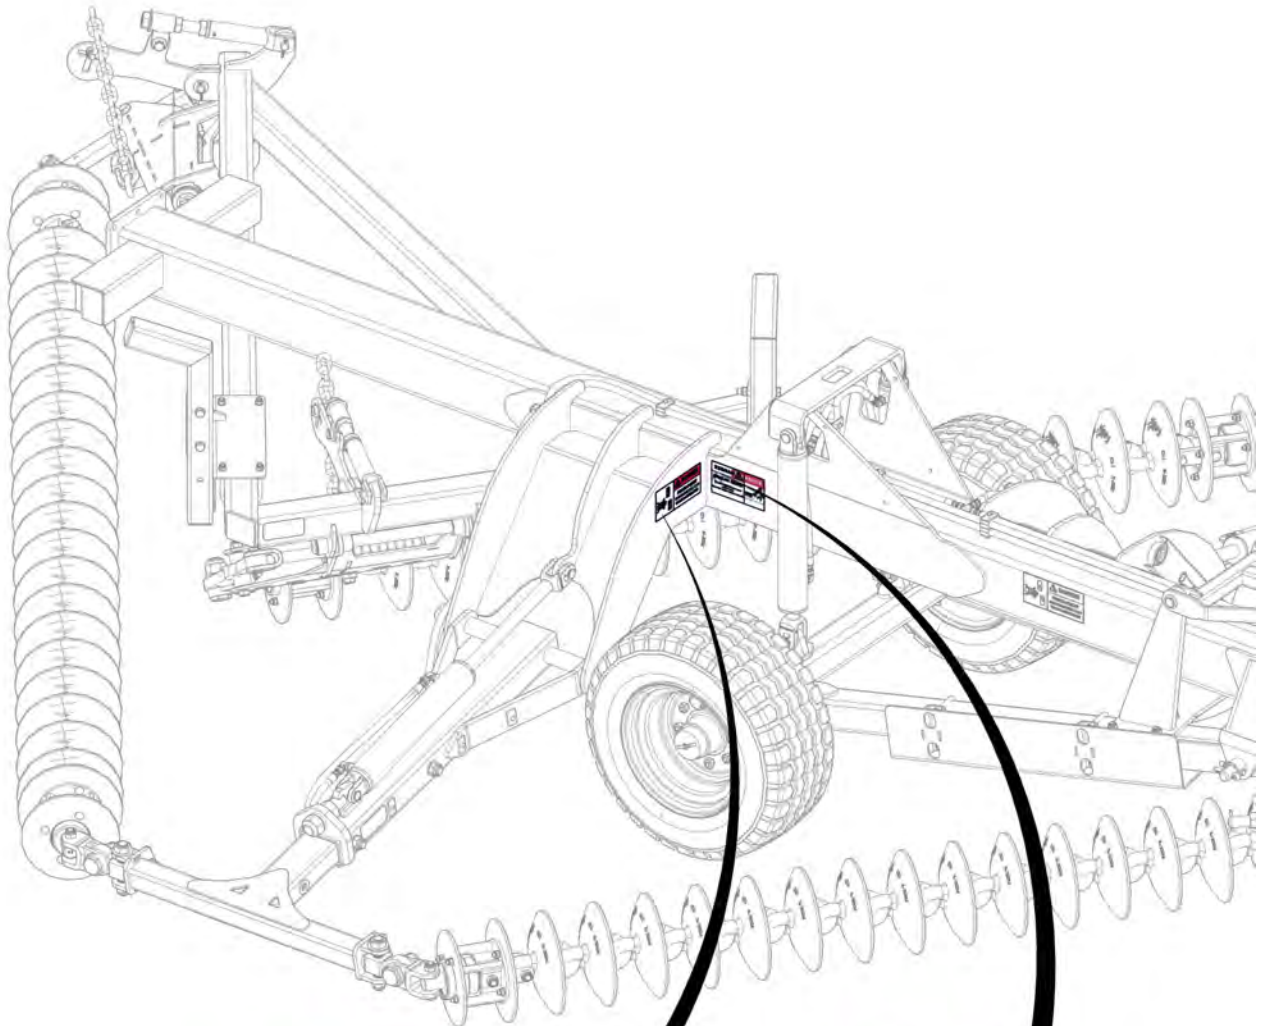


If any safety decals are missing please contact your local dealer immediately and do not use the machine.

Safety Decals - Individual Placement

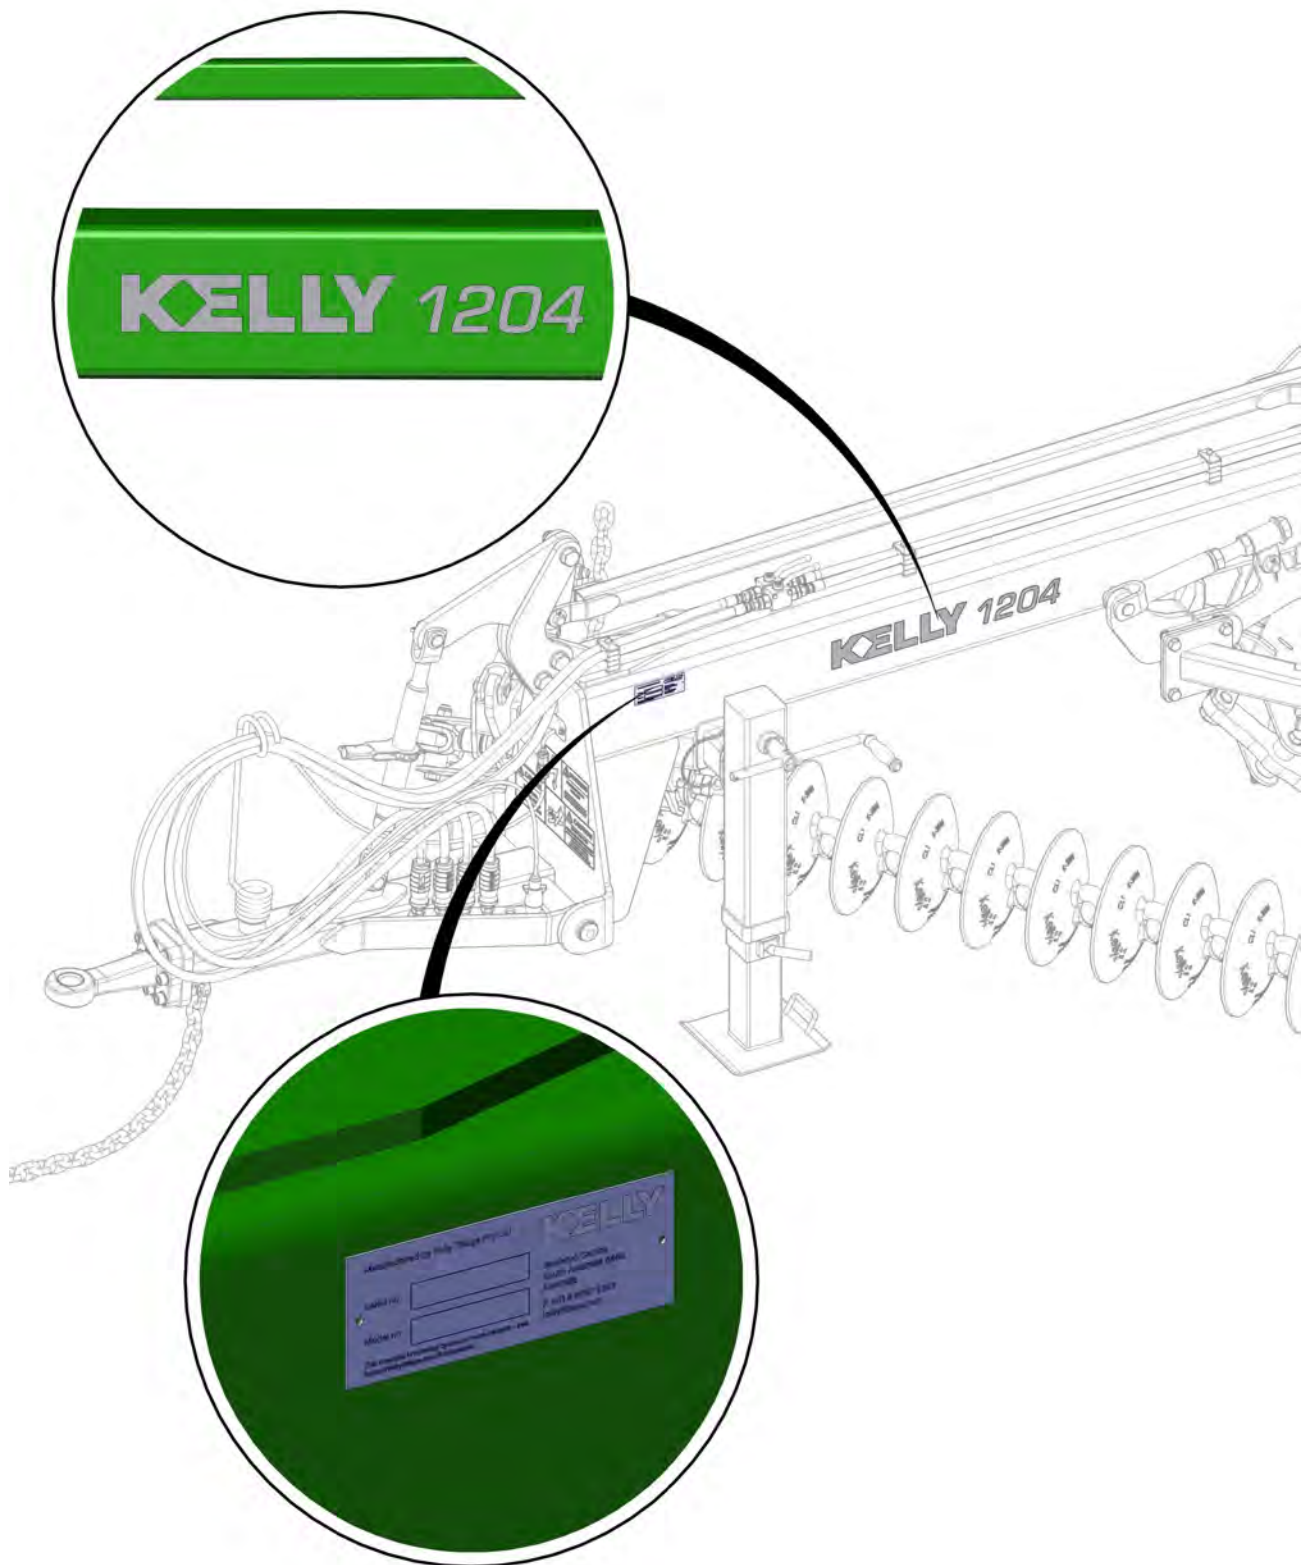


If any safety decals are missing please contact your local dealer immediately and do not use the machine.

Safety Decals - Individual Placement

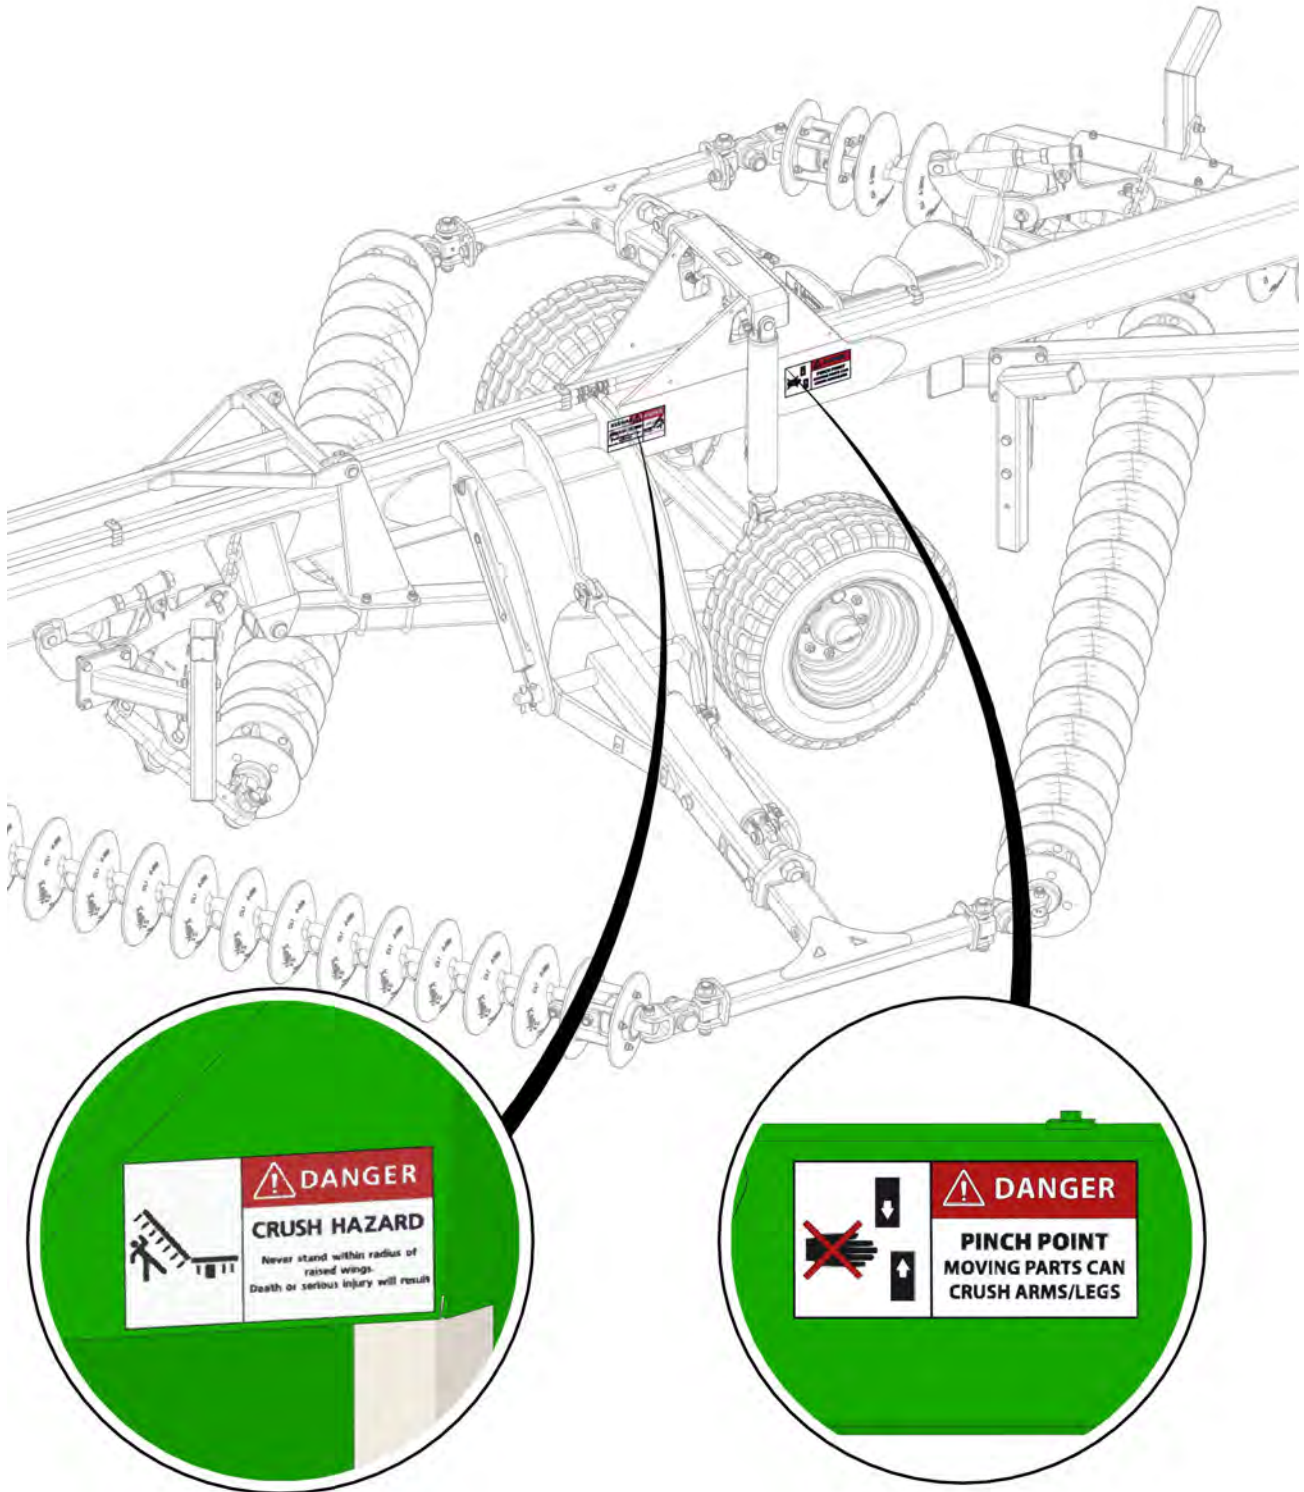


If any safety decals are missing please contact your local dealer immediately and do not use the machine.

Safety Decals - Individual Placement

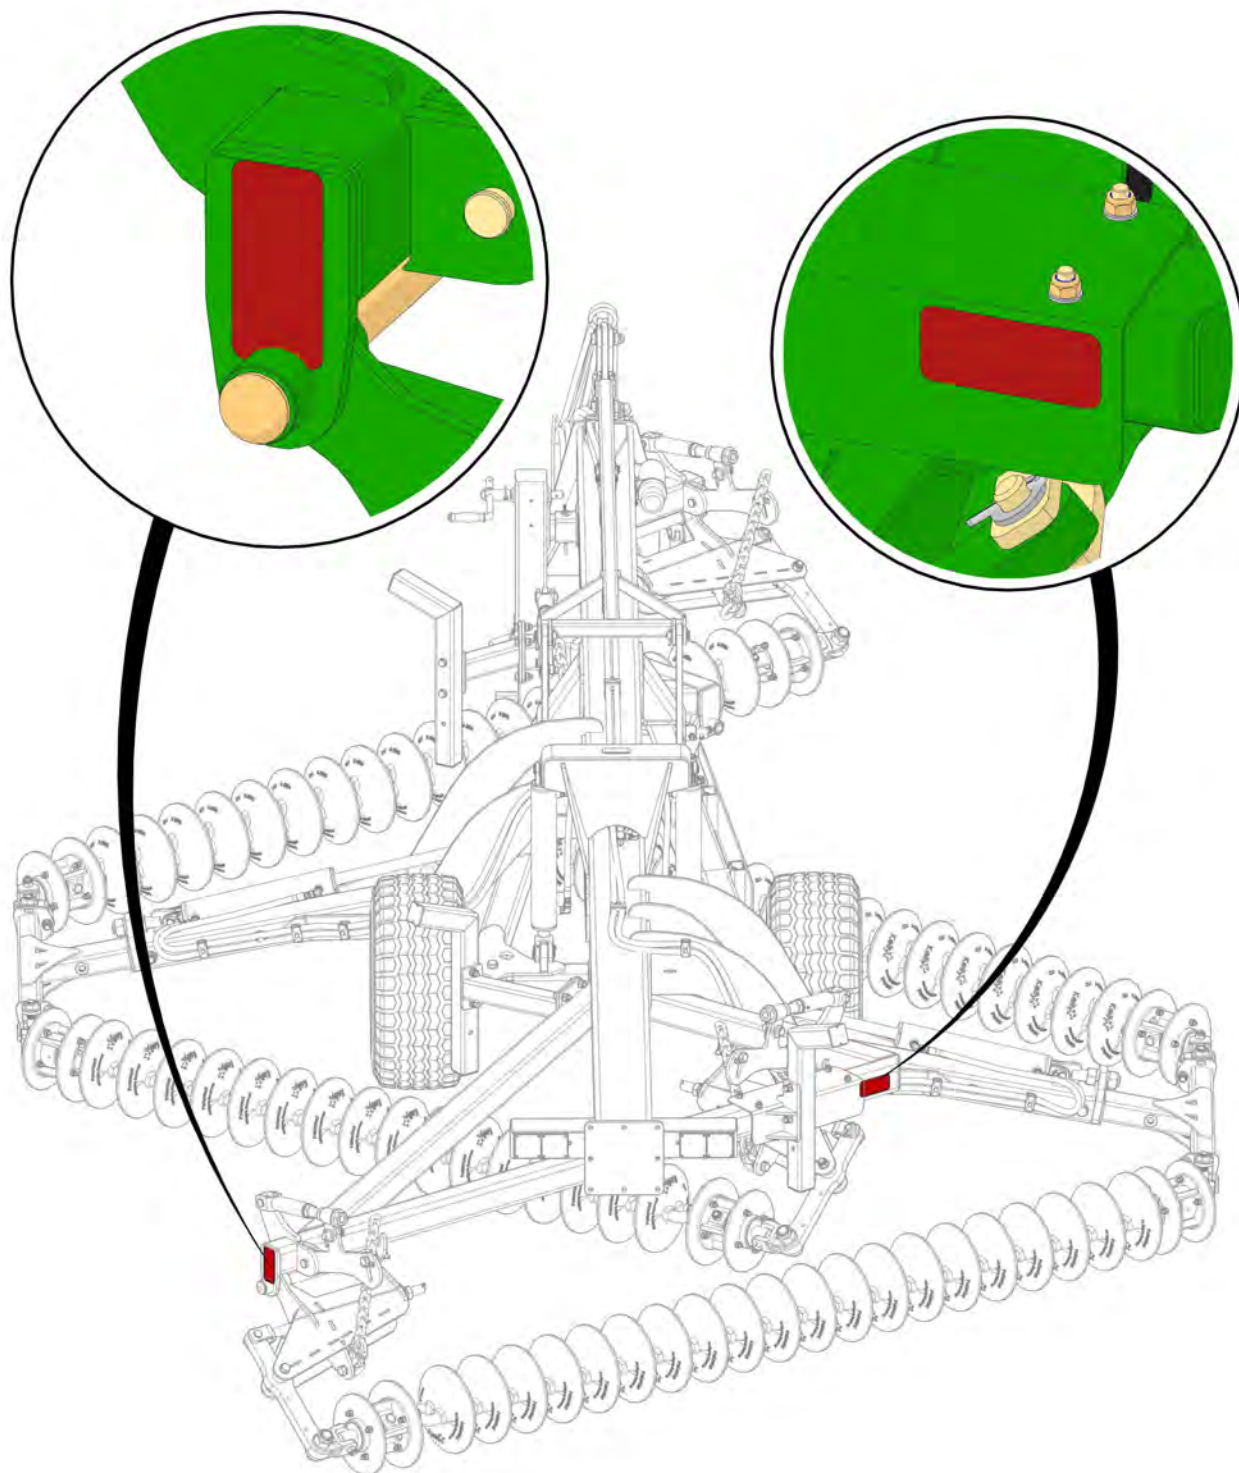

If any safety decals are missing please contact your local dealer immediately and do not use the machine.

Safety Decals - Individual Placement

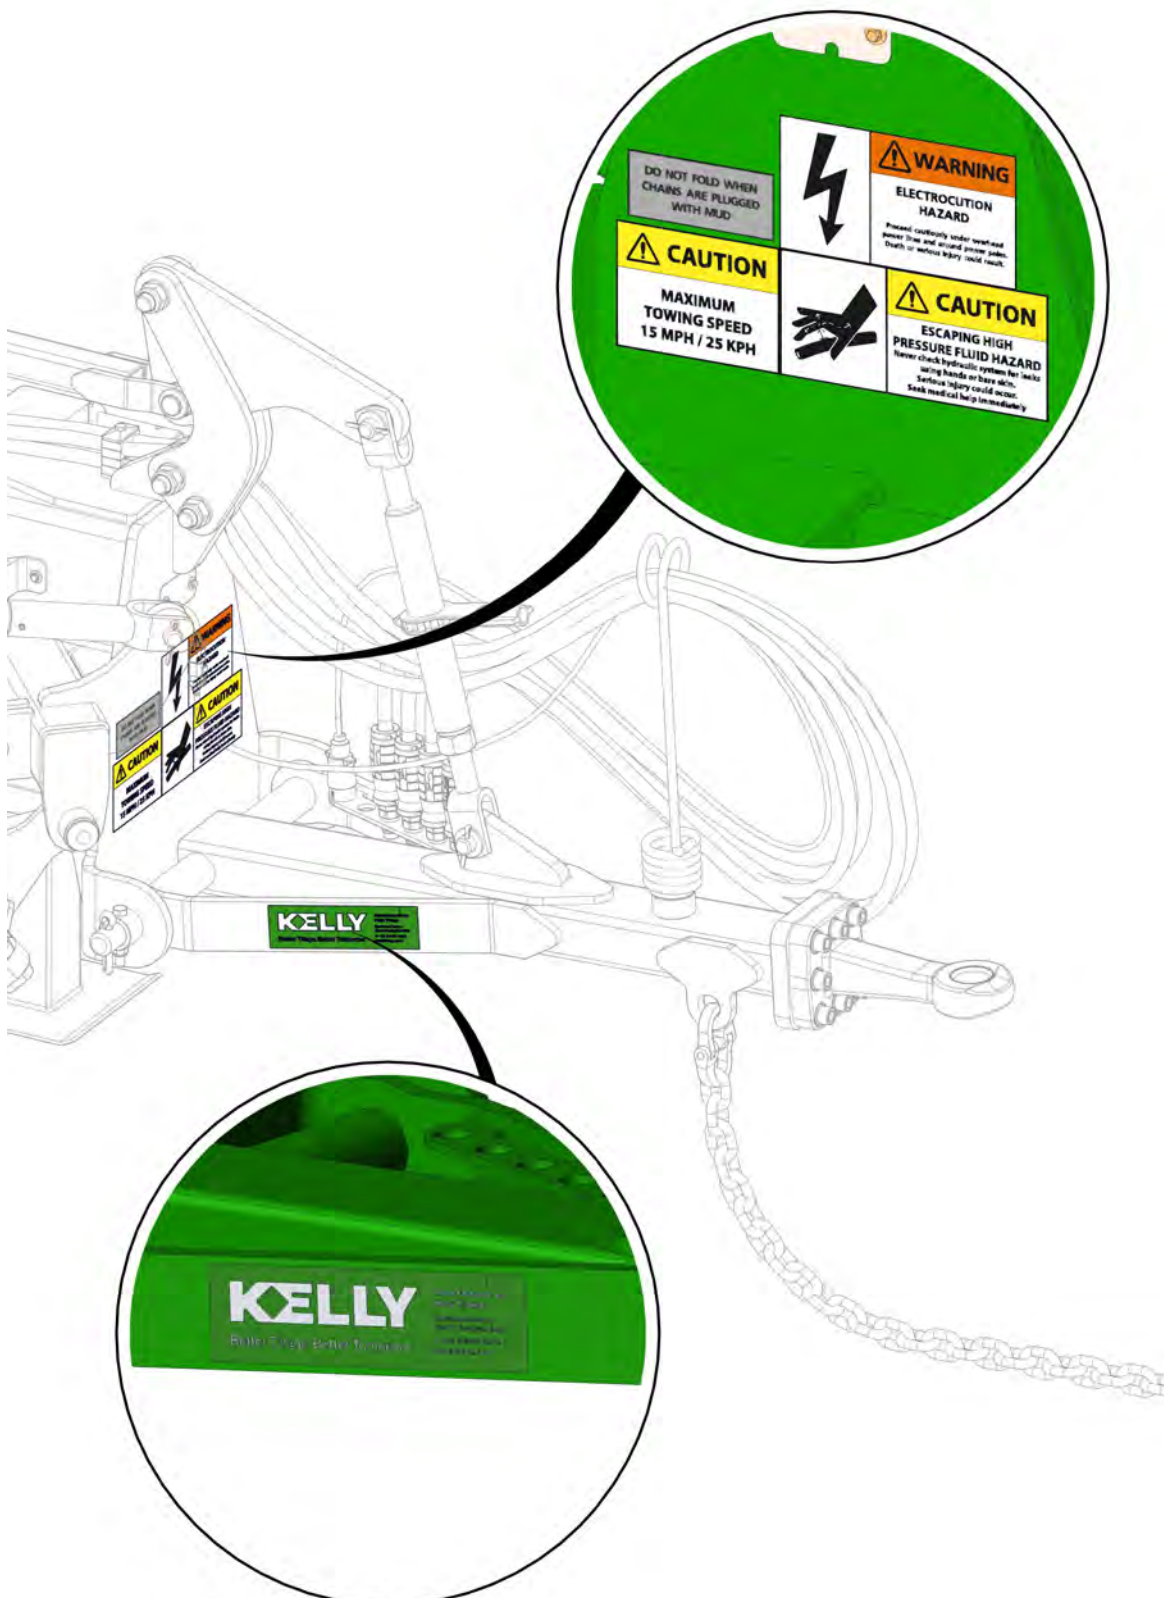

If any safety decals are missing please contact your local dealer immediately and do not use the machine.



Section 1 - Warranty

Global Warranty Policy

KELLY guarantees its products against faulty workmanship and materials for twelve (12) months from date of delivery to the customer. This manufacturer guarantee supplements in scope the statutory warranty applicable in the relevant country.

Disc Chain, Prickle Chain and Swivel Bearings units are wear items and it is reasonable to expect that these parts may need to be replaced over time. Swivel Bearing units are guaranteed for a period of twelve (12) months or 4000 hectares/10,000 acres, whichever occurs first. Replaceable cutting disc blades are warranted against faulty materials and workmanship only. All other ground engaging tools carry a 20,000 hectare/50,000 acre wear warranty.

If the machine is registered within 2 months of delivery to the customer and all documentation is returned as per the Terms and Conditions of KELLY extended Warranty Offer, KELLY then offers an additional 36-month framework warranty. Machine registrations can be completed by the customer or dealer on the KELLY website or by returning the registration form in the KELLY operators manual.

The KELLY warranty policy does not cover incorrect assembly after handover to the purchaser, misuse, modifications, damage during transit, nor product that has not been maintained as per the KELLY maintenance procedures outlined in the relevant product manual. Failure to properly maintain the machine or blatant misuse shall result in the warranty being null and void.

Any warranty repair, service or modification to products must be performed by an authorised KELLY repairer or pre-approved by KELLY in writing prior to any work being completed. If service parts are required these must be ordered through KELLY parts distribution.

ensure the continuity of warranty, it is expected that all warranty repair works are completed in a timely manner, as specified by KELLY. A returns authority will be issued to the Dealer for any faulty parts to be returned at the request of the company.

Claims for warranty, labour or parts must be completed by the authorised dealer on the prescribed warranty claim form found on the KELLY website. KELLY reserves the right to request written, photographic, or video documentation prior to any warranty approval. Warranty claims are to be lodged within 30 days of completion of work. If further information is requested by KELLY, an additional period of 30 days will be allowed to provide the requested information.

For any uncertainties regarding warranty coverage or inquiries about whether a product concern falls under warranty, kindly direct all queries to warranty@kellytillage.com. Our dedicated team will promptly assist you in resolving any concerns and ensuring a satisfactory resolution in accordance with our warranty policy.

Failure to adhere with the above instructions may result in the warranty claim being declined. Upon completion and approval of the claim, the dealer will receive a credit to their KELLY account.

The warranty will be immediately void if non-genuine KELLY approved parts & accessories are fitted.

To activate the warranty a Machine Registration form must be lodged with the manufacturer.

Complete the Machine Registration form online

Visit the **Resources** page on our website

Receive an additional 36-month frame warranty by registering your product within 2 months of purchasing. Simply return your completed machine registration form, dealer pre-delivery checklist KEFM317 and customer machine delivery form KEFM301 via email or post, or fill the online form to be eligible.

Purchaser/Owner

Name: _____

Address: _____

Email Address: _____

Contact number: _____

Occupation: _____

Purchasing Details

Date of Purchase: _____

Place of Purchase: _____

Model Purchase: _____

Serial Number: _____

What brought KELLY Tillage products to your attention?

| | | |
|-----------------|---------|---------------------------|
| Field Day | Family | Magazine/Newspaper: _____ |
| Dealer | Website | Demonstration: _____ |
| Friend/Neighbor | Radio | Referral Source: _____ |

On a scale of 1 to 10 (10 being highest) how likely are you to recommend us to friends and family?

| | | | | | | | | | |
|---|---|---|---|---|---|---|---|---|----|
| 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 |
|---|---|---|---|---|---|---|---|---|----|

If you scored 8 or below then what must we do to become a 10 in your opinion?

If you scored 9 or above then please tell us why you gave us this score:

Satisfaction with dealer/agent:

| | | | |
|---|-----|----|-------|
| Was the machine pre-delivered satisfactorily? | Yes | No | _____ |
| Were agents well informed about the product? | Yes | No | _____ |
| Would you recommend the agent to other farmers? | Yes | No | _____ |

Please return the completed form to:
Mail to: PO Box 100, Booleroo Centre SA 5482 Australia
Email to: sales@kellytillage.com

OR complete the Machine Registration form online:
 Visit the **Resources** page on our website



Section 2 - Machine Operation

Before Operation

- Carefully study and understand this manual.
- Do not wear loose fitting clothing that may catch in moving parts.
- Always wear protective clothing and footwear.
- Be sure that there are no tools lying in or on the equipment.
- Do not use the machine until you are sure that the area is clear, particularly of children or animals.
- If this machine is being used in a dry area, or in the presence of combustibles, care should be taken to prevent fires and fire fighting equipment should be readily available.
- Familiarise yourself and other operators with the machine's operation before using.


Pre-Operation Checklist

- All wheel nuts, bolts and nuts are tightened to the correct torque setting
- Split pins are in place and split
- Stickers and warning signs are in place
- Hydraulic fittings are tight and have no leaks
- Chains are adjusted so that all springs are compressed to 330mm/ 1' 1"
- Fold machine to ensure chains engage transport rests
- Check swivel units are not seized and still turning freely

Basic operation

Unfolding


1. Walk around and inspect the machine.
 - a. Check that chains are not hooked on framework.
 - b. Check swivel bolts at end of each chain are in place and not broken.
2. Open both transport safety lock valves at the front of the machine.

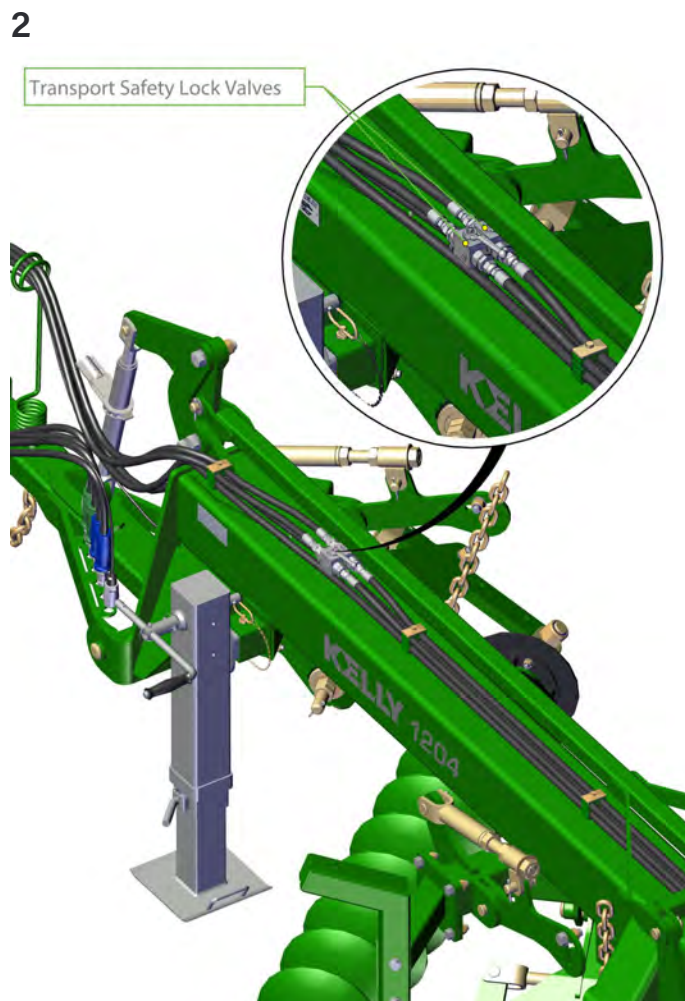

4. Lower front frame to safe working height.
5. Unfold wings, holding the hydraulic lever until the cylinders are fully extended.
6. Walk around machine and check that all chain links are straight and that working height of all swivels are correct for field conditions. Adjust if necessary. Refer to Page 26 for Chain Height Adjustment.
7. Move off with all chains in working position.

Basic operation

Unfolding

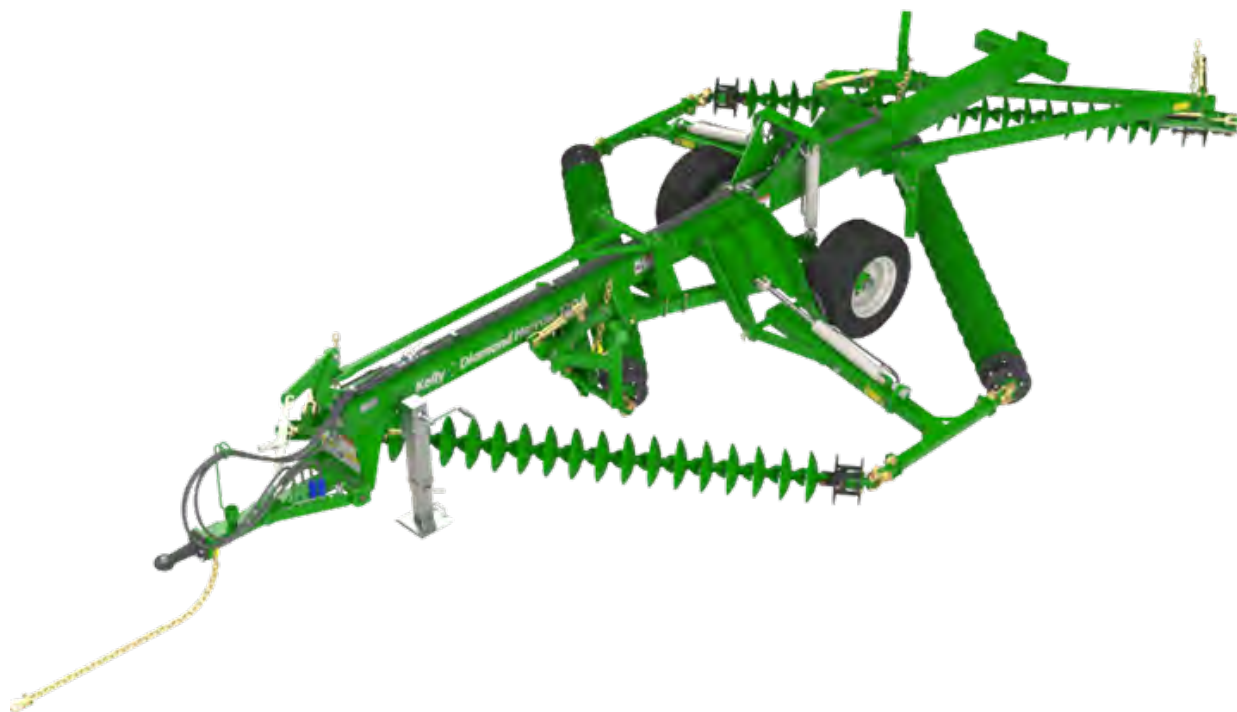

Basic operation


Folding

1. Walk around and inspect the machine.
 - a. Check that chains are not hooked on framework.
 - b. Check swivel bolts at end of each chain are in place and not broken.
2. Fold wings, holding the hydraulic lever until both cylinders are fully retracted.

Note: Blue grips allow you to fold and unfold wings.



Note: Green grips allow you to raise and lower the machine.

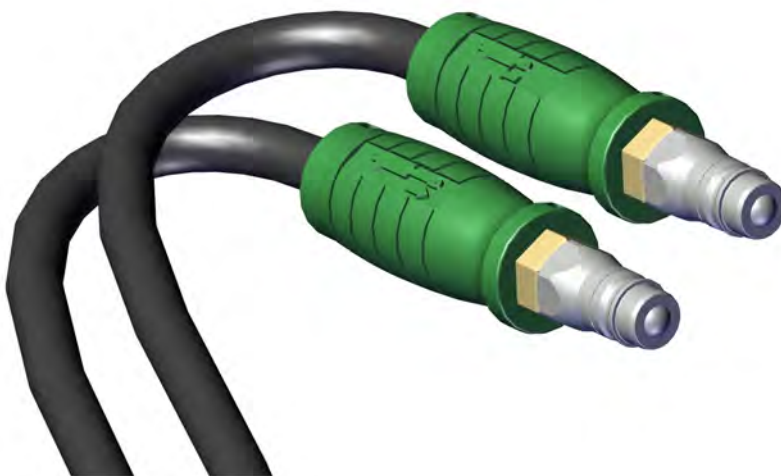

Basic operation

Folding



FRONT VIEW



REAR VIEW



RIGHT VIEW

3. Raise the machine to transport height until the cylinders are fully extended.
4. Close transport safety lock valves.
5. Raise the Transport Safety Stop and lock with the square pin.

Basic operation

Folding





Section 3 - Chain Operation and Correct Setup

Importance of good chain setup

Operational

Chain tension is critical to achieve a smooth and level seedbed. A correctly tensioned, monitored and maintained chain will deliver the results you need. Incorrect chain tension can lead to:


- Uneven results across the cut width of the machine
- Uneven ridges and furrows being created
- Uneven weed control
- Uneven residue incorporation
- Premature chain link wear

A correctly adjusted machine will not cause this phenomenon.


Chain tension

1. Loosen the lock nut on the module tension rod.
2. For correct chain tension, tighten the adjusting nuts clockwise until the outside face of the spring retaining washer is flushed with the face of the tension body. Spring length of 330mm / 1' 1"
3. If more than 150mm / 5-29/32 "of tensioner thread is visible, then remove one link from the chain set to maintain correct chain tension.
4. Retighten the lock nut.


1

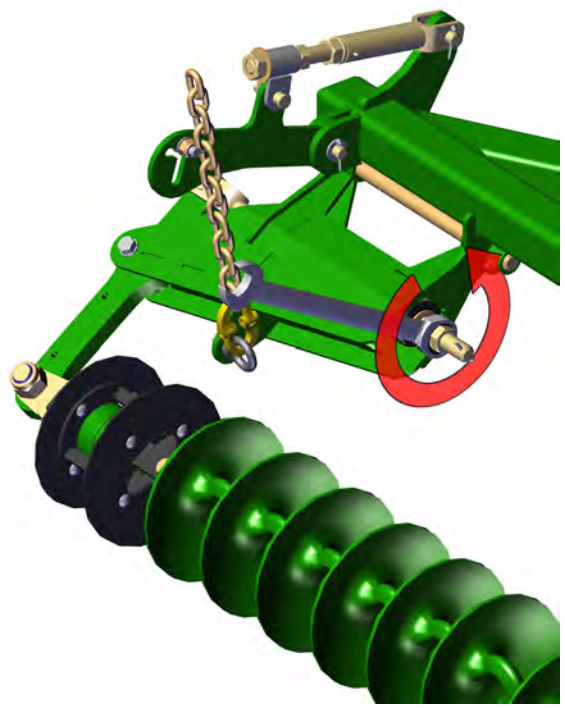

2

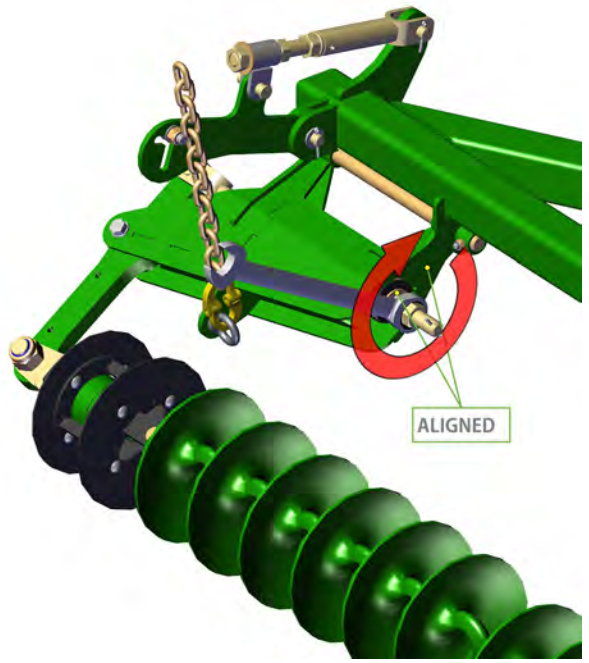

3

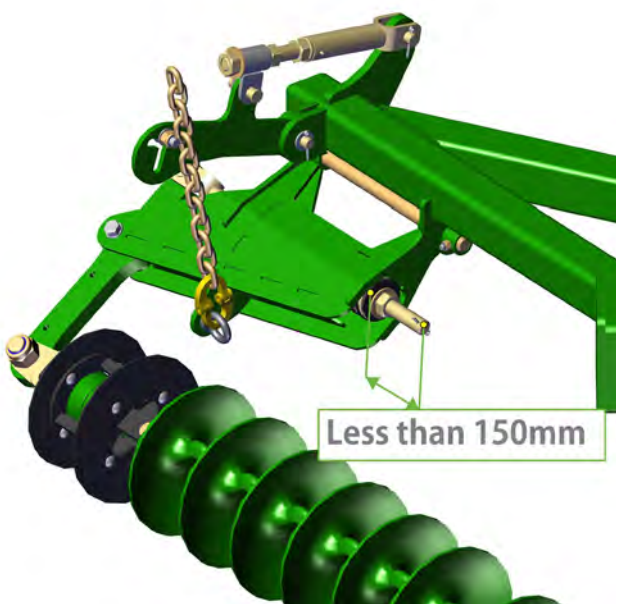


4



Chain curve

Correct chain tension will ensure that the entire length of discs will roll as one. This minimises the movement between each link. If a chain is not adjusted and runs loose, each link acts as a universal joint as the curved chain rolls along. The wear rate between each link is greatly accelerated and can lead to premature failure. The chain should not wear out before the discs are worn down.


ONLY POOR ADJUSTMENT CAUSES PREMATURE WEAR

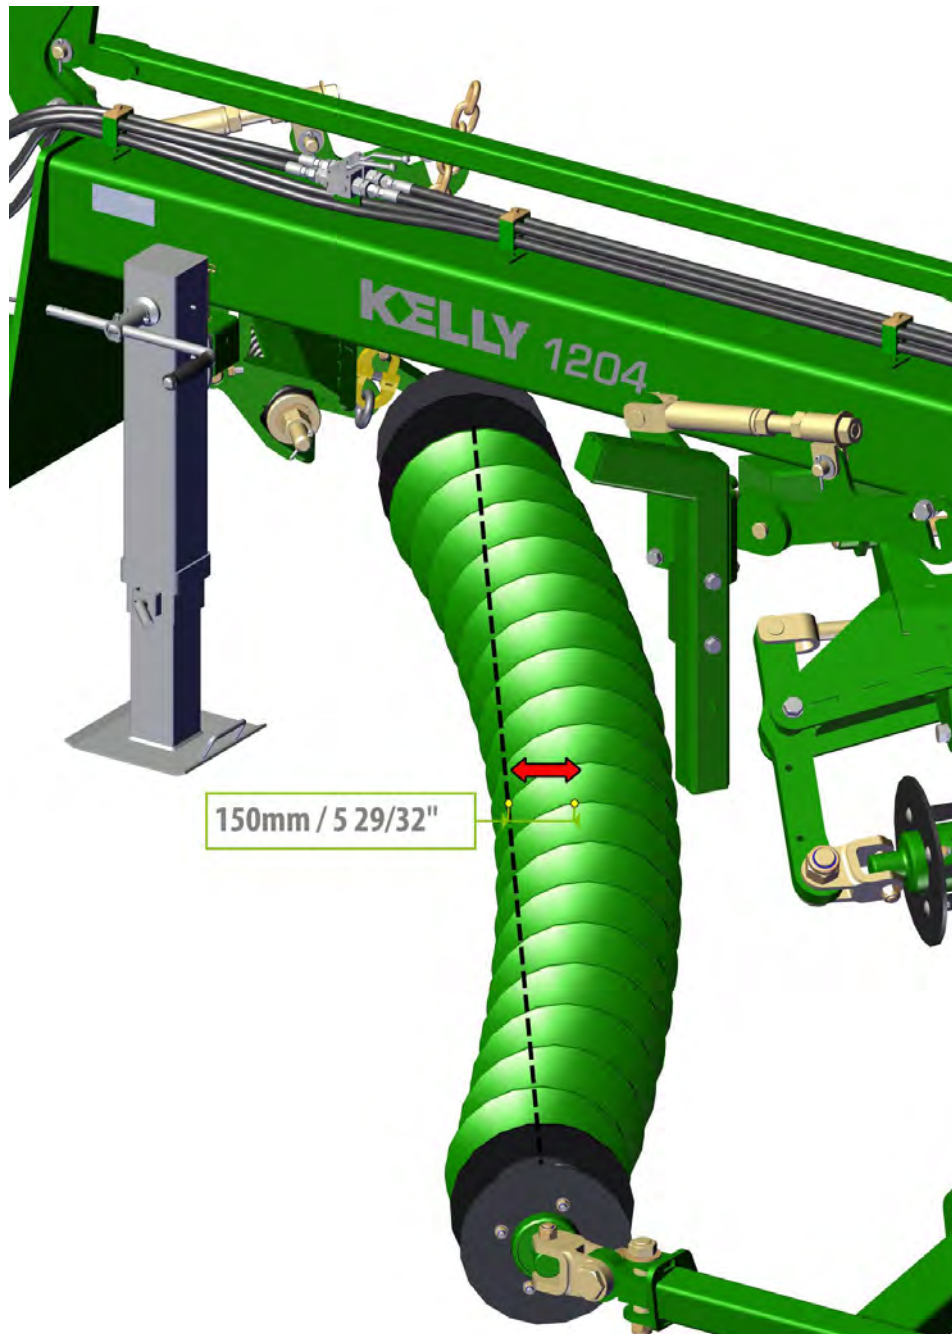

Indicator line shows acceptable curvature when operating.

Frame height adjustment


Check the length of the height adjusting chains on the two front chain mount plates.

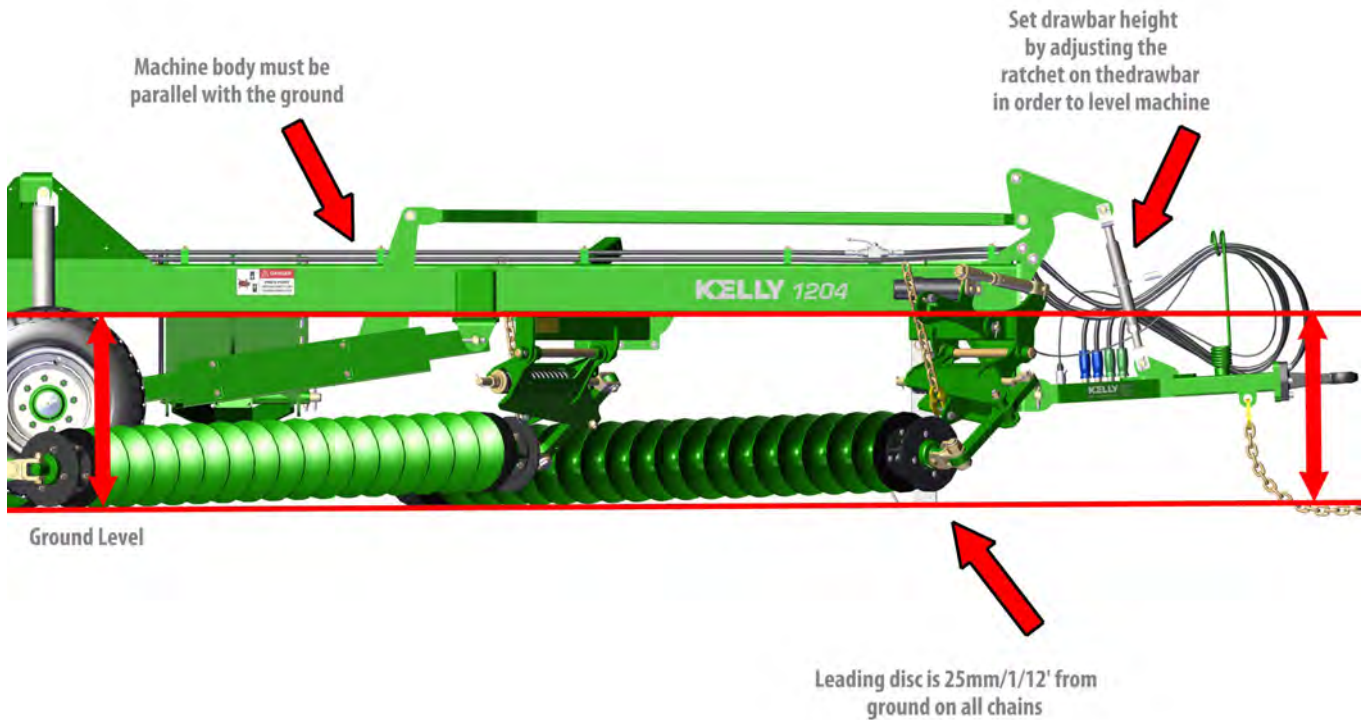

- There should be no slack in the chain and about 25mm / 1/12' of gap between the ground and the bottom of the first disc machine near the centre line.
- Make sure the swivel bearing centreline is parallel with the ground.

Drawbar height adjustment

Once the frame is level, tighten the lock nut on the drawbar ratchet. This sets the drawbar height correctly for your tractor.

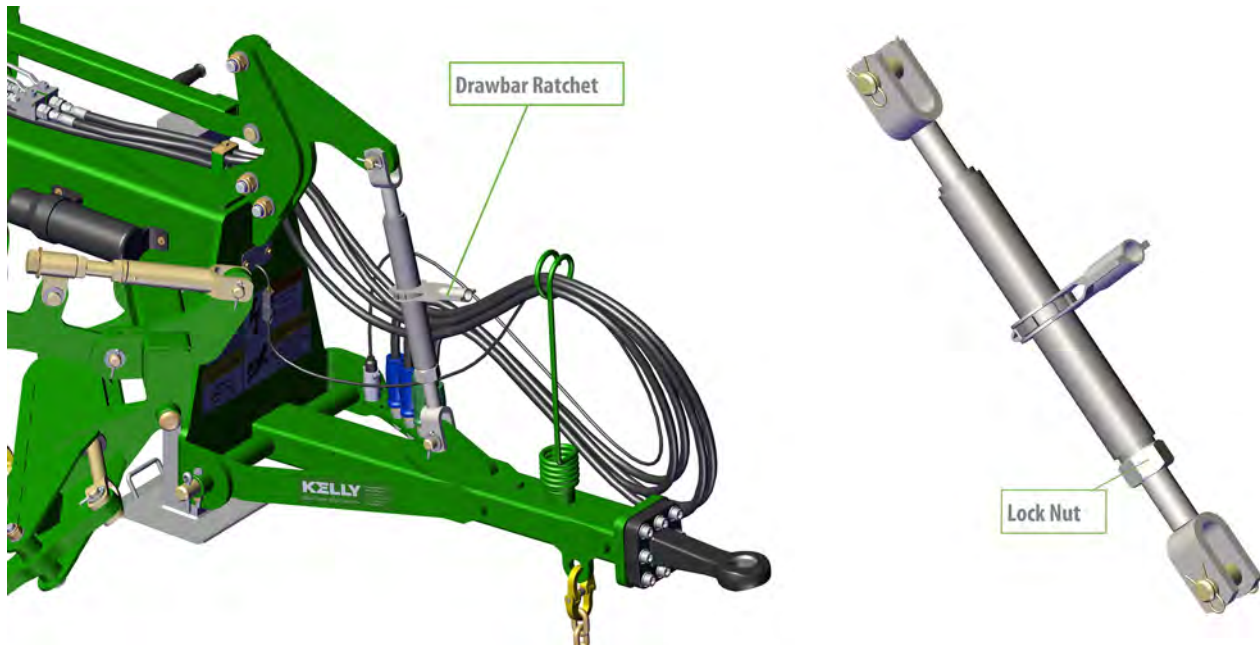


Chain height adjustment


Chain Tensioners

1. Where a large amount of adjustment is required remove the locking bolt and slide the chain through the T slot then replace locking bolt and fine tune height with threaded adjustor.
2. Using the supplied spanner, loosen the lock nut on the height adjustor thread.
3. Using the supplied spanner, adjust the height.
4. Tighten the lock nut.


1

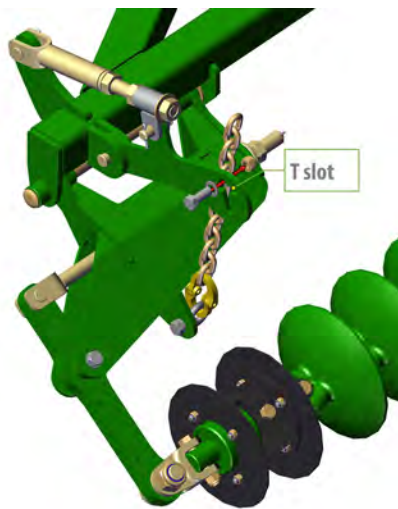


2

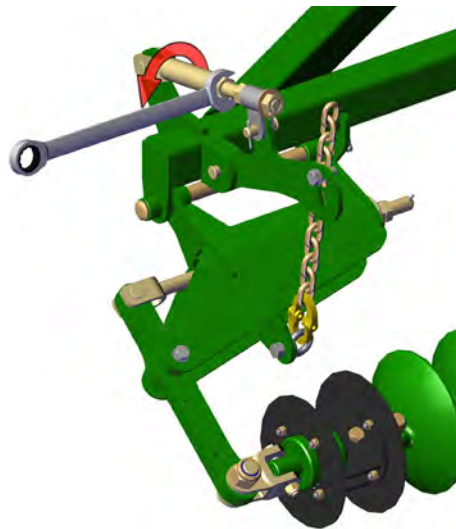

3


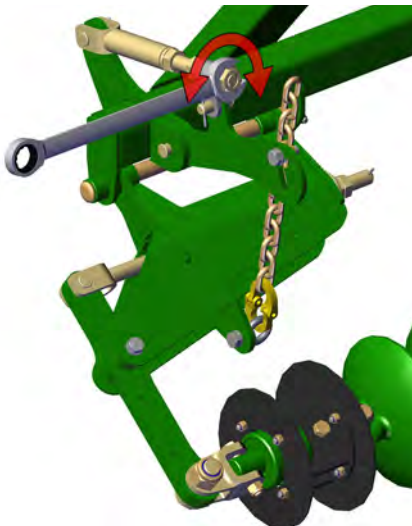


4

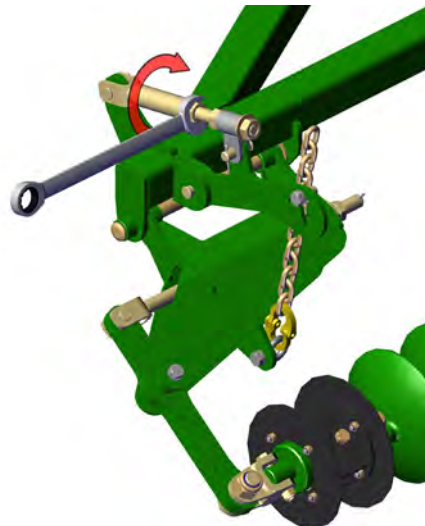


Wings

1. Loosen the bolt and nut in the height adjuster slot.
2. Using the supplied spanner, turn the height adjusting thread to raise or lower the chain as required.
3. Tighten the bolt and nut in the height adjuster slot.

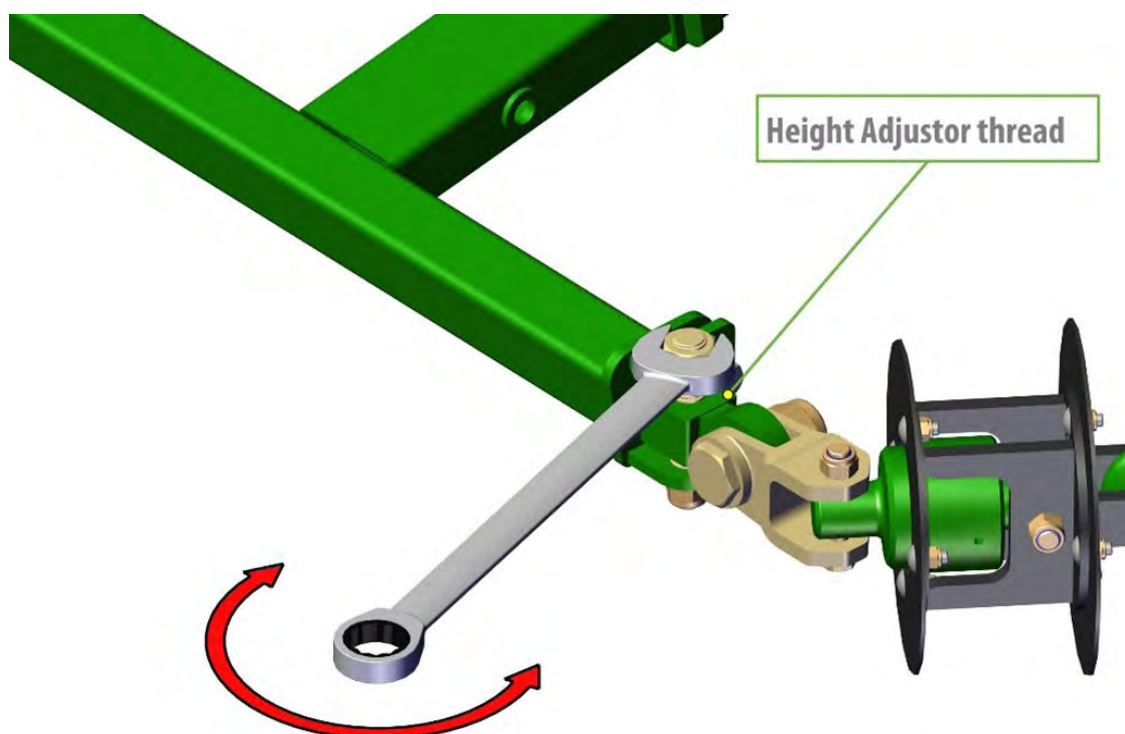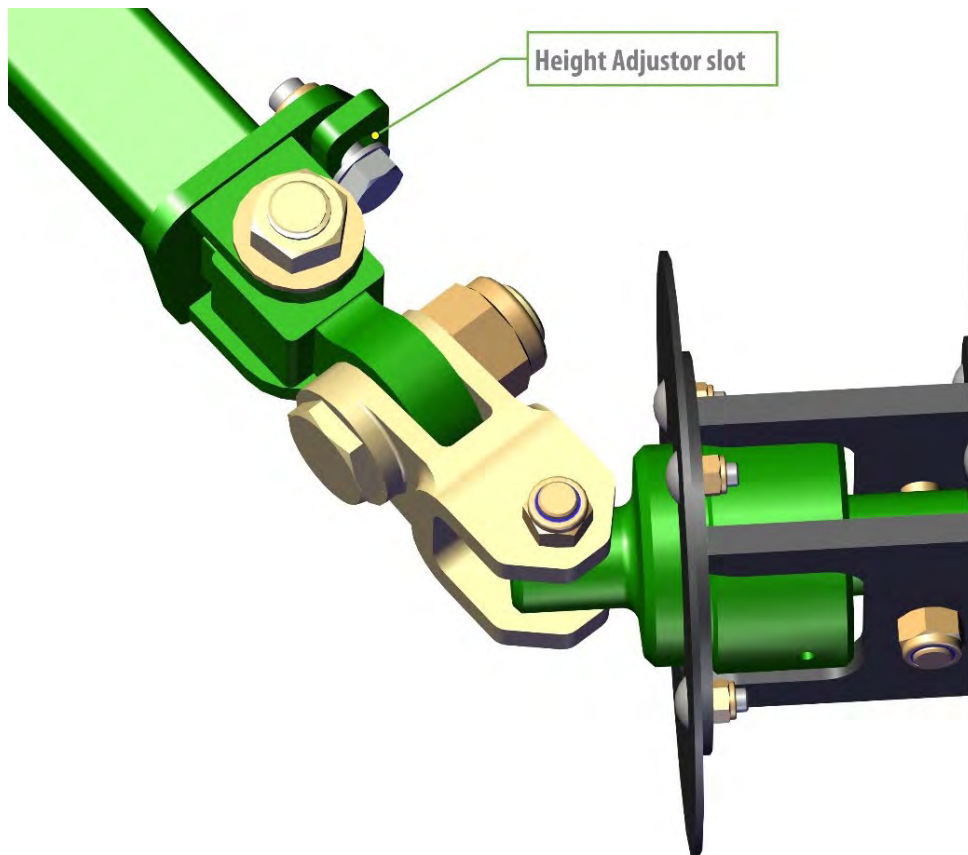

4. To raise the whole wing, you will need to do the following:
 - a. Loosen and wind the inner nut enough to allow desired movement.
 - b. Wind the outer nut clockwise to lift the wing to the correct height.
 - c. Tighten the inner nut.


5. To lower the whole wing, you will need to do the following:
 - a. Loosen and wind the outer nut until the wing is at the correct height.
 - b. Tighten the inner nut.

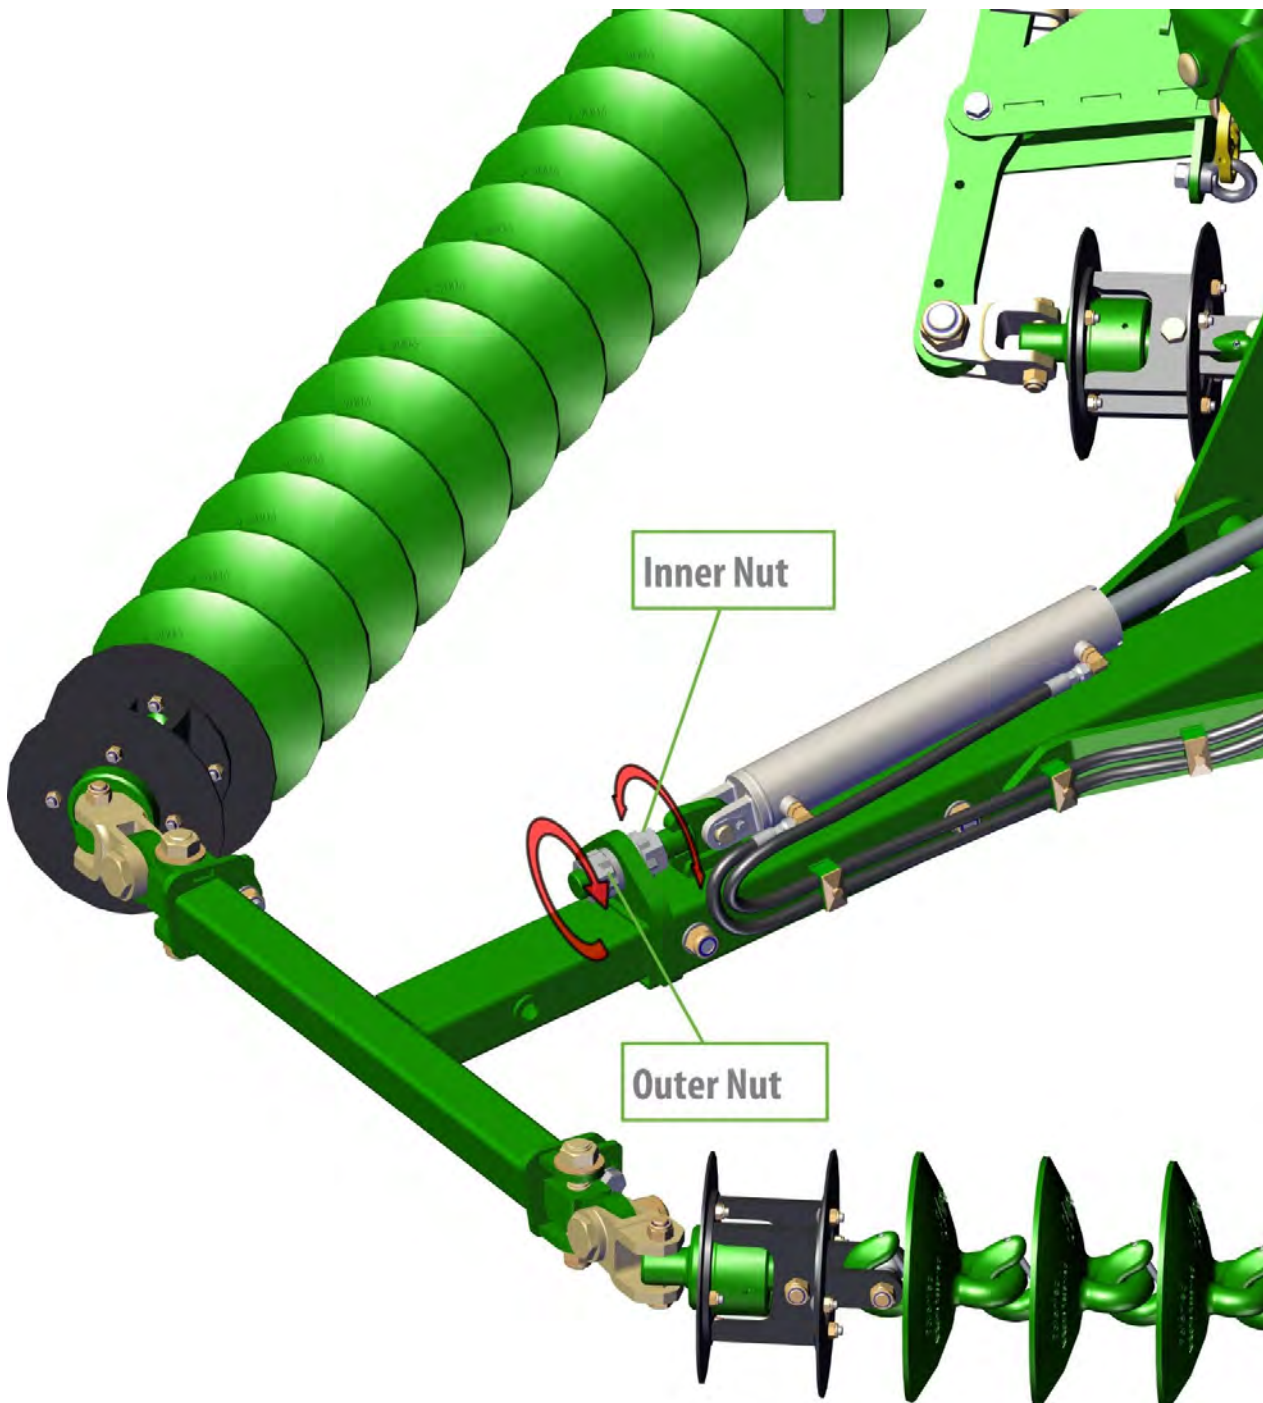

Wings extension


The Kelly Tillage System can be set to cut widths of:

1. 3.5m / 11' 5-25/32"
2. 4.0m / 13' 1-15/32"
3. 4.5m / 14' 9-5/32"

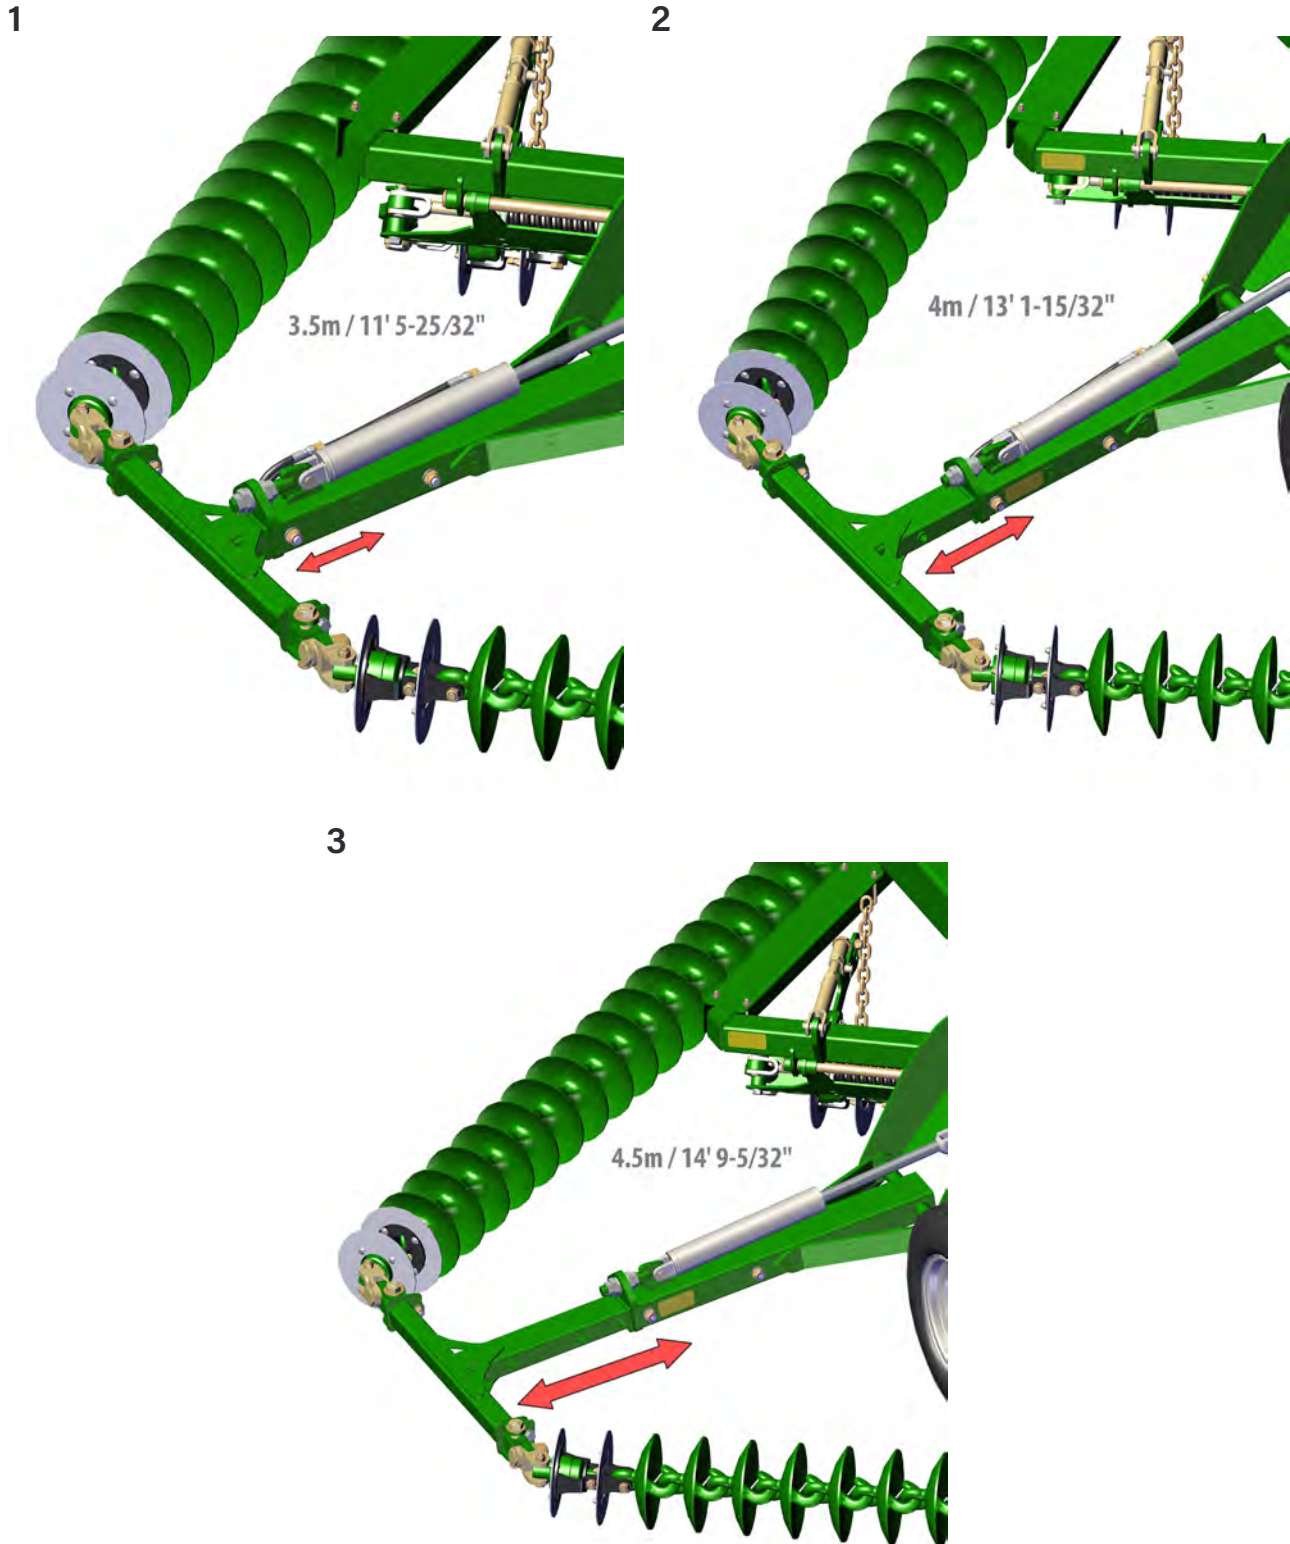

To change the width of the cut you will need to do the following:

- a. Remove the bolts holding the chain to the wings.
- b. Remove the 2 retaining bolts and slide the outer wing section in or out to the desired width, then replace the retaining bolts.

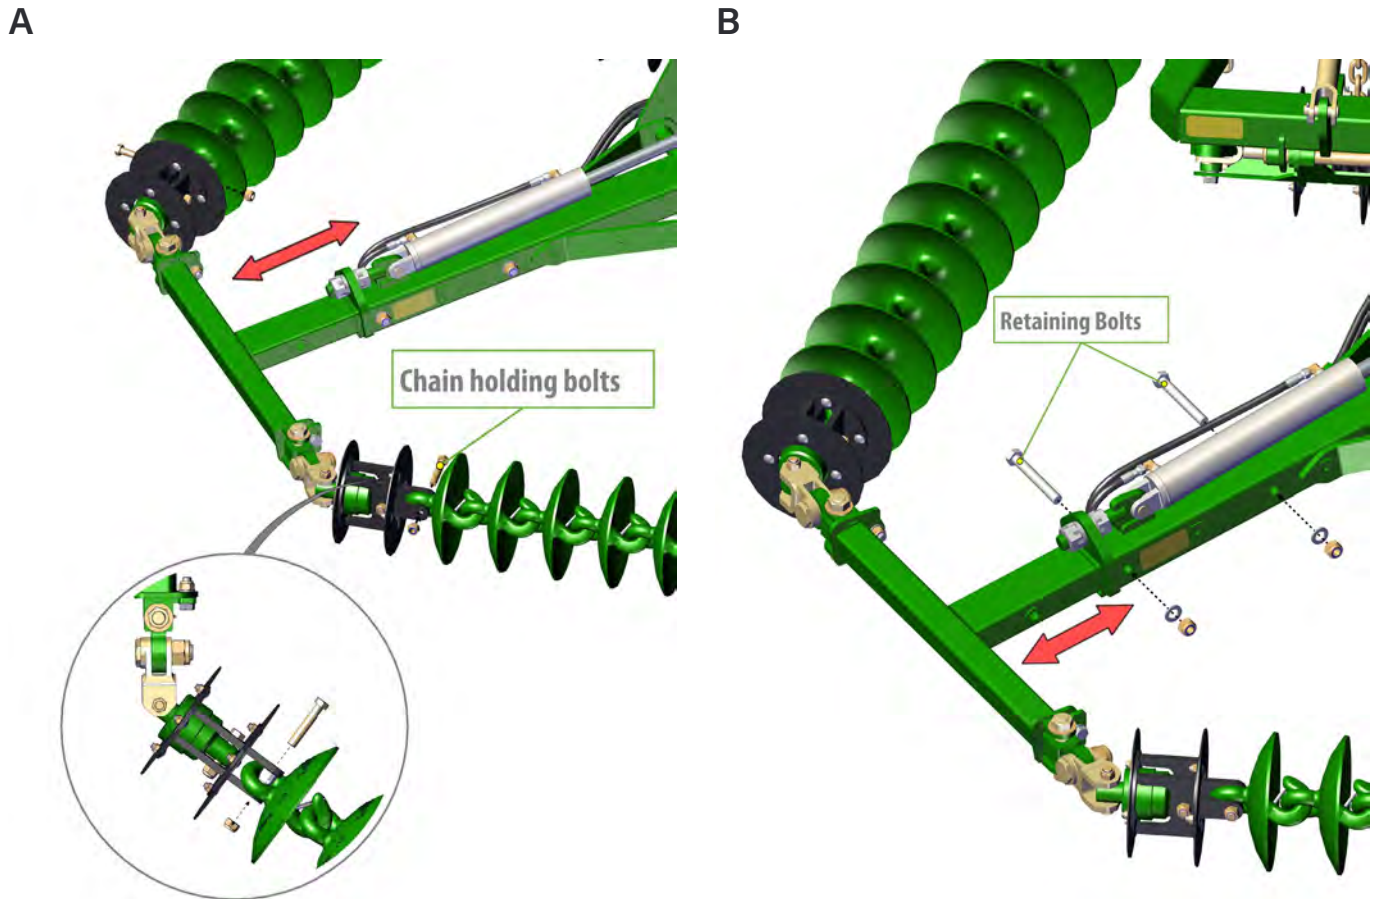

Note: You will need to remove or add chain links before reattaching to the wing.

Fine adjustment for perfect operating results


You may need to continue to adjust certain areas to achieve a level finish and a perfect seedbed.

It is possible with correct adjustment to achieve a level finish in most situations by manipulating the front and rear heights of each chain.

When set too low, the leading disc on each chain has the capability of pushing up a ridge of soil that the following chains may not level out. This can occur at the front of each chain, at the front of the rear chains (widest point) and at the front of the machine (either side of centre).

When the trailing disc is set too low, it may leave a furrow that may not be filled by other chains. Look for this at the rear of each chain, on the wings at the rear of the front chains and at the very rear of the machine near the centre line.

There is enough overlap built into the machine to ensure that it is possible to raise the front of all the chains just clear of the ground and still achieve a full cut.

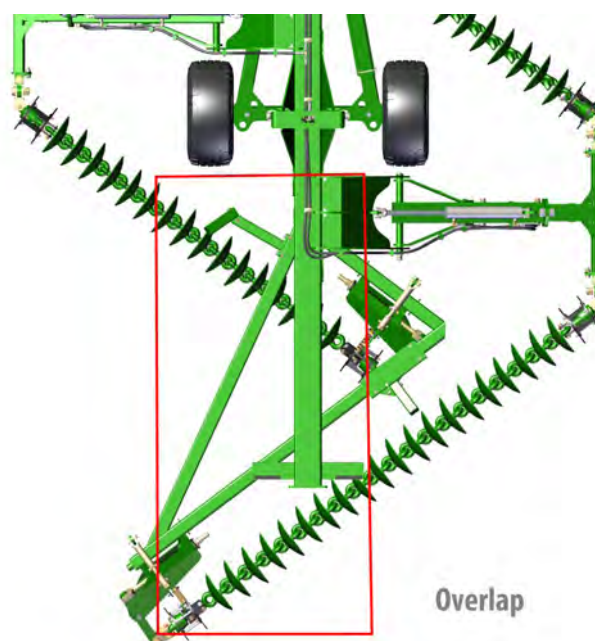


The optimum setting may vary depending on soil cover. In heavy stubble and unworked ground, it is possible to set the swivels low to the ground. In light stubble or loose soil, it is best to raise the leading discs so that the chains 'feather in' to the soil.

It is important to note that lowering the swivels will not cause the discs to dig deeper or more aggressively. It will result in premature wear of swivel hardware and the first two chain links. It will also cause ridges and furrows.


Digging effectiveness is a result of soil conditions and disc chain construction. The weight, shape, angle and spacing of the discs are the factors which influence efficacy. On hard dry soils it is unrealistic to expect the discs to dig fully or evenly. However, they will still perform well for residue breakdown and seed stimulation.

Importance of tapered chain end (TCE)


It is important to note that TCE's are designed to increase the effective cutting length of a disc chain. Nestling over the swivel bearing, this fabrication minimizes the 'dead' or ineffective chain length between the mounting point and the first effective cutting disc.

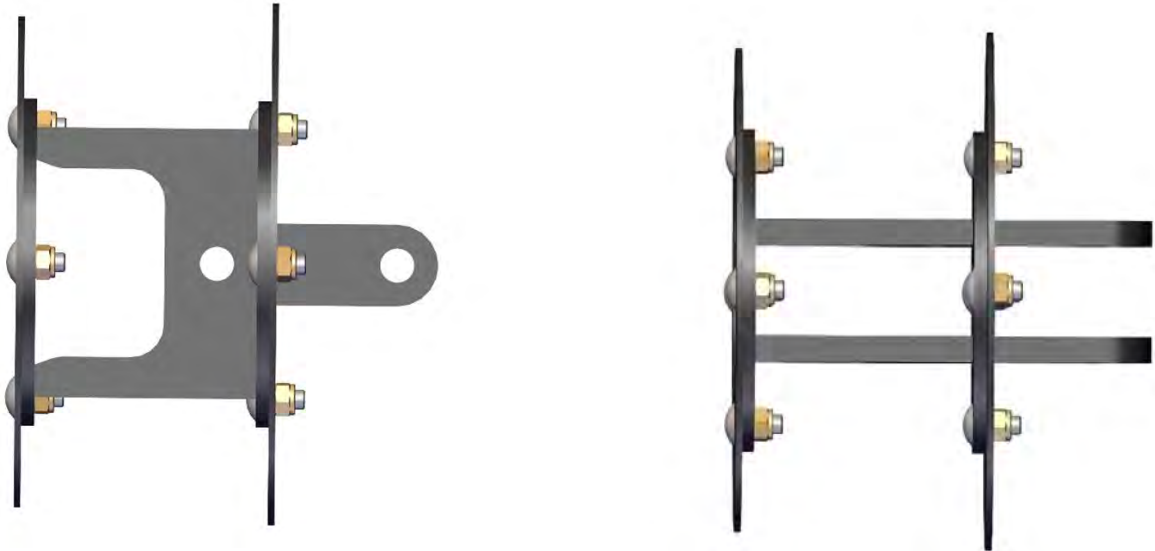

The blade diameters have been selected to ensure an optimal soil surface finish at the end of the chains. Thus, the intent is that the bearing height can be set on the centreline of the chain, parallel with the ground.

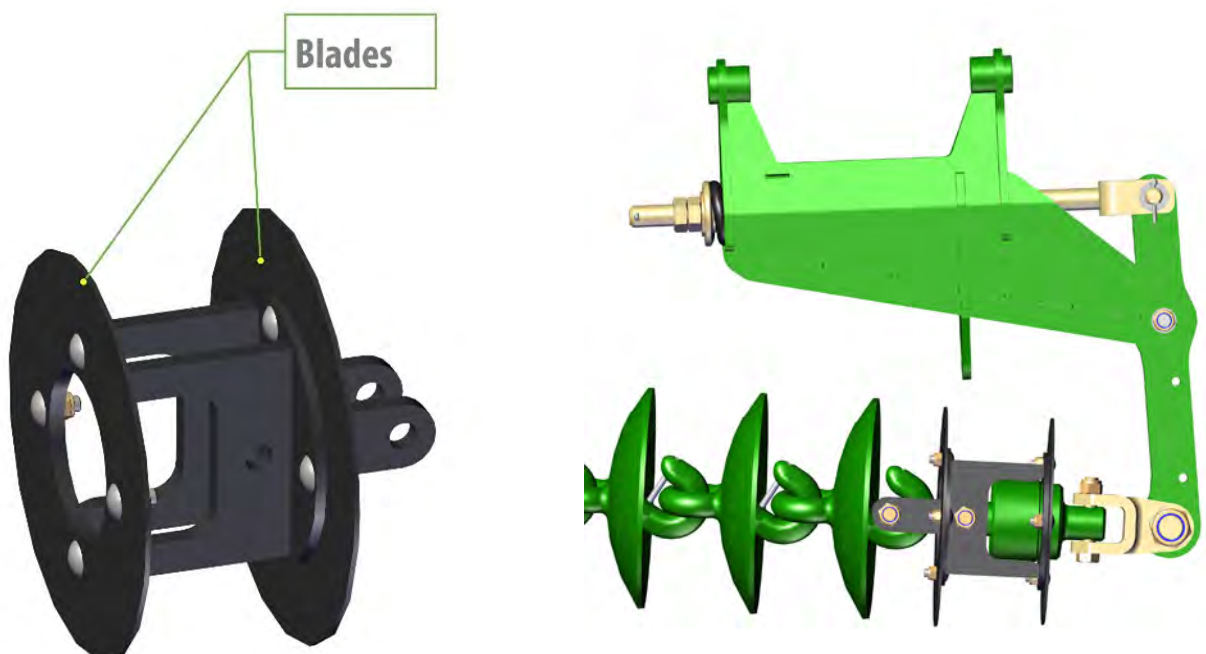

These TCE's can be fitted on the wings, to increase the overall effective cutting width of the machine and to provide a smoother surface for the wing wheels to traverse, which will decrease the wing bounces. However, they will be most useful on the chain mounting points through the centre of the machine, to help maximize the overlap of the chains.

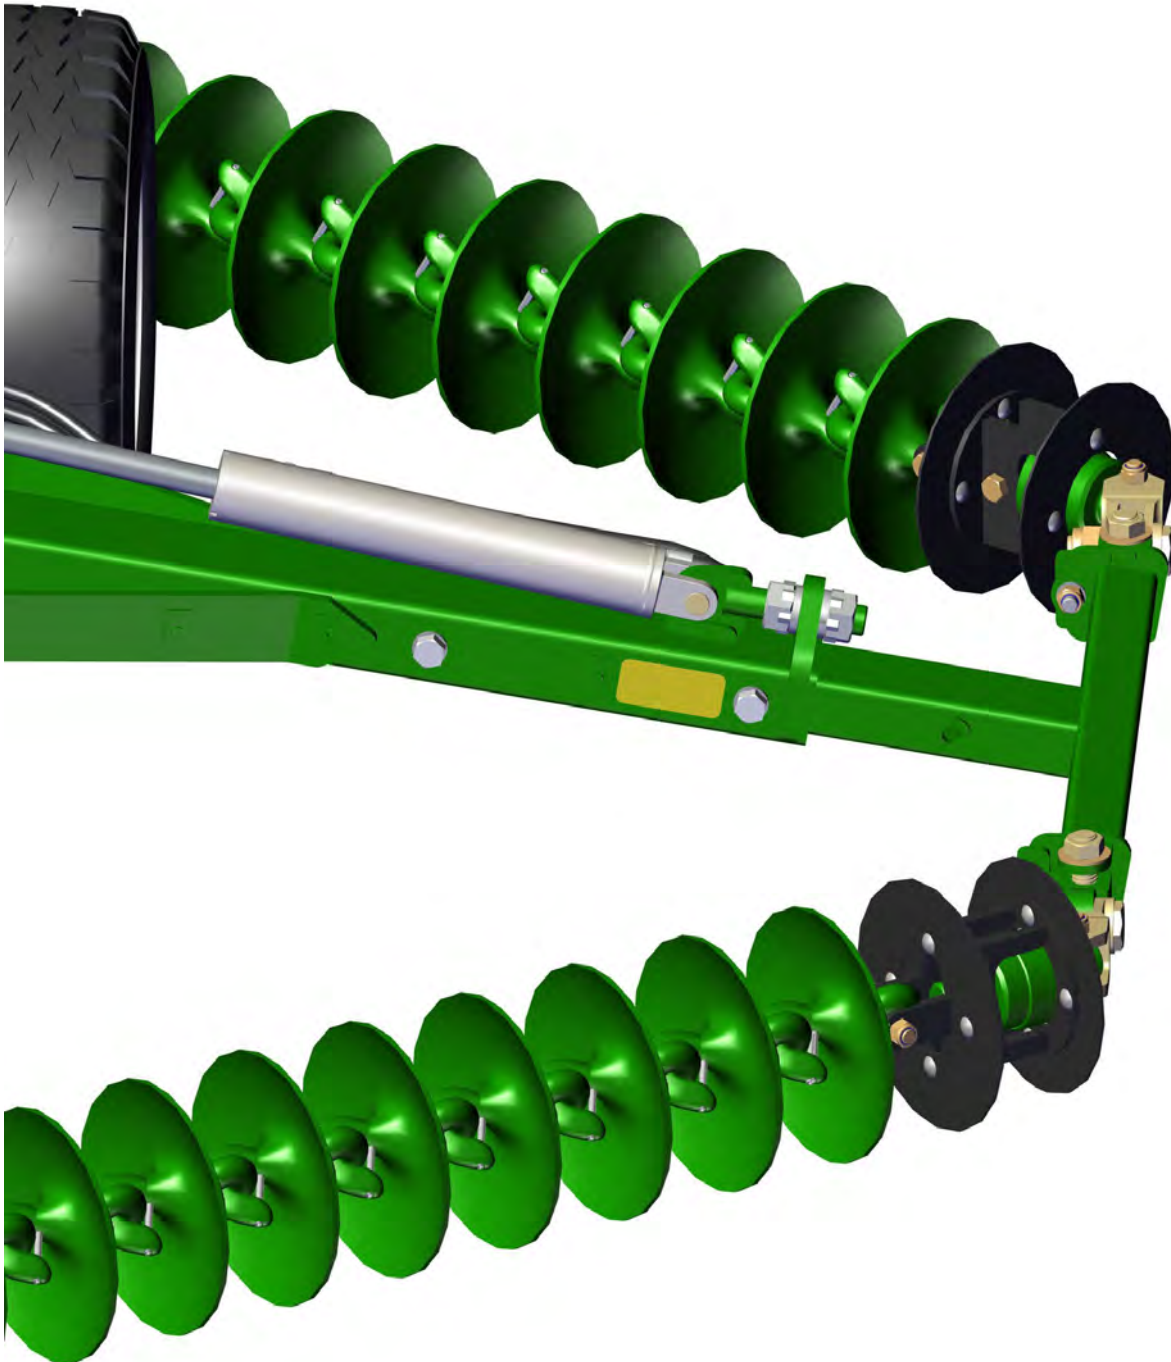



Section 4 - Maintenance and Inspection

Maintenance and inspection

Good maintenance is your responsibility

- Before working on your machine, ensure all moving parts have stopped
- Always use a safety support and block the wheels
- Use extreme caution when making adjustments
- Replace shields and guards after servicing and before moving
- After servicing, make sure all tools, parts and service equipment are removed
- Where replacement parts are necessary for periodic maintenance and servicing, genuine factory parts must be used. Kelly will not guarantee the use of unapproved parts and other damages as a result of their use and will not be liable for injury or warranty if equipment has been altered in any way
- An appropriate fire extinguisher and first aid kit should be kept readily available while performing maintenance.

Recommended maintenance checklist

| Item to check | First operation | Daily | 25 hourly | Pre-season |
|---|-----------------|-------|-----------|------------|
| Hydraulic, hose and cylinders for damage and oil leaks | ✓ | ✓ | | ✓ |
| Loose or missing fasteners/split pins | ✓ | ✓ | | ✓ |
| Check bushes, pivot and cylinder pins for wear and replace as necessary | | | | ✓ |
| Swivel unit fasteners | ✓ | ✓ | | ✓ |
| Swivel unit - free and smooth rotation | | ✓ | ✓ | ✓ |
| Swivel unit temperature: Average operating temperature is 55 °C, Failure is indicated at +80 °C | ✓ | ✓ | | ✓ |
| Tyres are inflated to correct pressure | ✓ | ✓ | ✓ | ✓ |
| Wheel nuts are tightened at correct torque | ✓ | | | ✓ |
| Check wheel bearings | ✓ | ✓ | ✓ | ✓ |
| Check and tighten dust caps | ✓ | | ✓ | ✓ |
| Disc roll pins/ locking bolts are in place | ✓ | | | ✓ |
| Chain is tensioned correctly | ✓ | ✓ | | ✓ |
| Lights are working correctly | ✓ | ✓ | | ✓ |
| Warning signs are attached | ✓ | ✓ | | ✓ |
| Grease wheel bearings | | | | ✓ |
| Grease drawbar pivot | | | ✓ | ✓ |
| Grease wheel lift bush | | | ✓ | ✓ |
| We recommend that swivel units are covered for storage to prevent water penetration. | | | | |

Chain inspection

- There is a break-in period where the disc chain will wear in and become longer.
- More frequent adjustments will be necessary on a new machine.
- Over time, as the disc chain wears, it may be necessary to remove a link to maintain disc chain tension. This is the most important check and adjustment to ensure a long working life for the disc chain.

Trouble shooting

The majority of the Kelly Tillage System operating problems are due to incorrect adjustment. This trouble shooting section will help you by providing solutions to common problems.

| Symptom | Problem | Solution |
|---|---|--|
| Wings bouncing | Operating speed is too fast for field conditions. | Refer to page 37 for operating speed |
| Chain Links wearing | Chain too loose. Chain loops back when working. | Refer to page 21-22 for setting correct chain tension |
| | Swivel set too close to ground. | |
| Chain not rotating | Front chain swivels on machine too low Foreign material fouling bearings | Refer to page 23 |
| | Bearing failure in swivel unit | |
| Uneven tread wear on transport wheels | Tyre pressure too low Excessive road speed | Inflate to correct pressure refer to table on page 37 Always travel at a safe speed. NEVER EXCEED 25kph/16 mph. |
| Chain not tensioning properly | Excessively worn chain May need a link removed | Replace if required Remove excess chain link |
| Operation leaves ridge behind machine Operation leaves furrow behind machine | Front or rear chain swivels are too low | Refer to chain height adjustment on page 26 |



Section 5 - Specifications

Operating speed

| Recommended operating speeds in normal conditions with all chain types | |
|--|-------------------------|
| Operating / working speed | (5-8 mph) / (8-12 km/h) |
| Transporting / towing speed | (16 mph) / (25 km/h) |

Tyre pressure

| Tyre size | Ply | KPA | PSI |
|------------|-----|-----|-----|
| 13.0/55-16 | 14 | 250 | 36 |

1204 specifications

| | |
|--------------------------|--------------------------------|
| Model 1204 Set at | 3.5m/11' 5-25/32" |
| Operating width | 3.79m / 12' 5-7/32" |
| Transport width | 2.31m / 7' 6-15/16" |
| Transport height | 2.17m / 7' 1-7/16" |
| Transport length | 8.98m / 29' 5-17/32" |
| Model 1204 Set at | 4m/13' 1-15/32" |
| Operating width | 4.29m / 14' 29/32" |
| Transport width | 2.31m / 7' 6-15/16" |
| Transport height | 2.42m / 7' 11-9/32" |
| Transport length | 8.98m / 29' 5-17/32" |
| Model 1204 Set at | 1204 - 4.5m/14' 9-5/32" |
| Operating width | 4.80m / 15' 8-31/32" |
| Transport width | 2.34m / 7' 8-1/8" |
| Transport height | 2.66m / 8' 8-23/32" |
| Transport length | 8.95m / 29' 4-3/8" |

Bolt torque settings


| Bolt Type | Wheel nut | | | | U Bolt | | | Class 8.8 Bolt | | | | | Class 10.9 Bolt | | Grade 8 Bolt |
|-----------|-----------|-----|------|-------|--------|-----|-----|----------------|-----|-----|-----|-----|-----------------|-----|--------------|
| Bolt Size | M18 | M20 | 1/2" | 9/16" | M10 | M12 | M16 | M10 | M12 | M16 | M20 | M24 | M20 | M24 | 1" UNF |
| Ft lb | 255 | 265 | 90 | 100 | 22 | 36 | 55 | 32 | 48 | 140 | 190 | 270 | 300 | 350 | 849 |
| Nm | 345 | 360 | 125 | 140 | 30 | 50 | 75 | 44 | 65 | 190 | 260 | 370 | 406 | 475 | 1151 |

[1] When fitting a wheel and tyre to a hub, tighten the wheel nuts in a star pattern to the correct tension. To achieve this, choose a wheel nut & tighten, then proceed to the opposite side of the hub to the next wheel nut and tighten and so on until all wheel nuts are tight. Then repeat the procedure to check that all nuts are tight. Do not use impact tools to tighten wheel nuts.

For a guide to the correct tension of the wheel nuts please use the appropriate tension for your size wheel nuts from the Bolt Torque Settings table.

Torque values are for dry threads and surfaces however it is permissible to apply a small amount of anti-corrosive oil to the threads.

Verification and recording of the prescribed torque settings in the table above is the responsibility of the assembler and it shall be documented in accordance with their approved Quality Assurance system

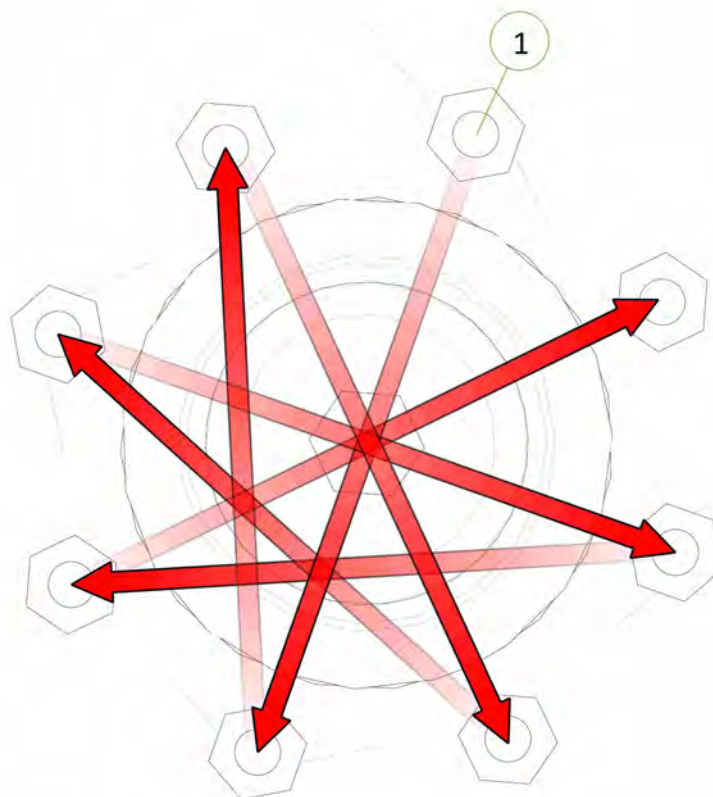

Disc chain lengths and Quantities

| 1204 Model | | Length | K4 | CL1 | W36 | R300 | SD49 | PCH |
|------------|-------------|-----------------------|----|-----|-----|------|------|-----|
| 3.5m | Front Left | 2.760m / 9' 21/32" | 17 | 17 | 16 | 22 | 22 | 31 |
| | Front Right | 2.373m / 7' 9-7/16" | 15 | 14 | 14 | 19 | 19 | 26 |
| | Rear Right | 3.124m / 10' 3" | 20 | 19 | 18 | 25 | 25 | 35 |
| | Rear Left | 2.472m / 8' 1-5/16" | 15 | 15 | 14 | 20 | 20 | 27 |
| 4m | Front Left | 2.998m / 9' 10-1/32" | 19 | 18 | 17 | 24 | 24 | 33 |
| | Front Right | 2.609m / 8' 6-23/32" | 16 | 16 | 15 | 21 | 21 | 29 |
| | Rear Right | 3.361m / 11' 5/16" | 21 | 20 | 20 | 27 | 27 | 37 |
| | Rear Left | 2.710m / 8' 10-11/16" | 17 | 16 | 16 | 22 | 22 | 30 |
| 4.5m | Front Left | 3.205m / 10' 6-3/16" | 20 | 20 | 19 | 25 | 25 | 35 |
| | Front Right | 2.815m / 9' 2-13/16" | 18 | 17 | 16 | 22 | 22 | 31 |
| | Rear Right | 3.568m / 11' 8-15/32" | 22 | 22 | 21 | 28 | 28 | 39 |
| | Rear Left | 2.920m / 9' 6-31/32" | 18 | 18 | 17 | 23 | 23 | 32 |

For correct chain tension, chain links may need to be removed from the end of the chain as follows:

K4 Disc Chain - unhook disc chain link/s from end of the disc chain

CL1 Disc Chain - unhook disc chain link/s from end of the disc chain

W36 Disc Chain - cut a disc chain link from the end of the disc chain

R300 Disc Chain - cut a disc chain link from the end of the disc chain

Spiked Disc Chain - cut a disc chain link from the end of the disc chain

Prickle Chain - cut a prickle chain link from the end of the prickle chain

Scan the following QR code to open the removing a welded disc chain video.





Section 6 - Pre-Delivery Checklist

| Check Item: | Checked by Initial |
|--|-----------------------|
| Hydraulic hoses are routed through holders and fitted to cylinders with no leaks | |
| All bolts and nuts are tightened to the correct torque values and marked. | |
| All split pins are inserted and split | |
| All safety signs and decals are in the correct locations as per the Assembly/Operator's manual | |
| All safety lights are in the correct locations and working | |
| All tyres are fitted correctly and inflated to correct pressure | |
| All wheel nuts are tightened to the correct torque and marked | |
| Swivel Units are correctly orientated | |
| Grease all marked locations | |
| Disc roll pins/locking bolts are installed in the discs (CL1, CL2 and K4 only) | |
| Check the chain tension as per Operator's manual | |
| Machine is registered for warranty | |
| Customer has been shown the website and how to access parts information | |
| Operator's manual has been provided with the machine | |

Completed Pre-Delivery Checklist to be returned to warranty@kellytillage.com within 7 days of delivery to the customer.

| | |
|-------------------|--|
| Name: | |
| Signature: | |
| Date: | |



Notes

Ruled area for notes, consisting of multiple horizontal lines.



Phone +61 8 8667 2253
Email sales@kellytillage.com
kellytillage.com

Booleroo (Head Office)
684 Kelly Road,
Booleroo Centre SA 5482

Adelaide Office
28 Greenhill Road,
Wayville SA 5034

